

User's manual

CL84100/CL84200/ CL84250/CL84300/ CL84350 DECT 6.0 corded/cordless telephone/answering system with caller ID/call waiting



Congratulations

on your purchase of this AT&T product. Before using this AT&T product, please read the **Important safety information** on pages 85-86 of this manual. Please thoroughly read this user's manual for all the feature operations and troubleshooting information necessary to install and operate your new AT&T product. You can also visit our website at

www.telephones.att.com or call 1 (800) 222-3111. In Canada, dial 1 (866) 288-4268.

Model number: CL84100 (one handset)

CL84200 (two handsets) CL84250 (two handsets) CL84300 (three handsets) CL84350 (three handsets)

Type: DECT 6.0 corded/cordless telephone/answering system with

caller ID/call waiting

Serial number: _	
Purchase date:	
Place of purchase	2

Both the model and serial numbers of your AT&T product can be found on the bottom of the telephone base.

Save your sales receipt and original packaging in case it is necessary to return your telephone for warranty service.



Telephones identified with this logo have reduced noise and interference when used with most T-coil equipped hearing aids and cochlear implants. The TIA-1083 Compliant Logo is a trademark of the Telecommunications Industry Association. Used under license.



The ENERGY STAR® program (www.energystar.gov) recognizes and encourages the use of products that save energy and help protect our environment. We are proud to mark this product with the ENERGY STAR® label indicating it meets the latest energy efficiency guidelines.

Clearspeak™ is a trademark of Advanced American Telephones.

© 2010 Advanced American Telephones. All Rights Reserved. AT&T and the AT&T logo are trademarks of AT&T Intellectual Property licensed to Advanced American Telephones, San Antonio, TX 78219. Printed in China.

Parts checklist

Your telephone package contains the following items. Save your sales receipt and original packaging in the event warranty service is necessary.







Quick start quide



Telephone base



Handset with coiled cord




Cordless handset (One for CL84100) (Two for CL84200 and CL84250) (Three for CL84300 and CL84350)



Charger for cordless handset with power adapter installed (One for CL84100) (Two for CL84200 and CL84250) (Three for CL84300 and CL84350)



Battery compartment cover (One for CL84100) (Two for CL84200 and CL84250) (Three for CL84300 and CL84350)

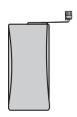

Battery for cordless handset (One for CL84100) (Two for CL84200 and CL84250) (Three for CL84300 and CL84350)



Telephone line cord



Power adapter for telephone base

User's manual

CL84100/CL84200/CL84250/ CL84300/CL84350 DECT 6.0 corded/cordless telephone/answering system with caller ID/call waiting

Table of contents

Getting started	Call screening	21
Quick reference guide - handset1	Number of rings	21
Quick reference guide -	Remote access code	22
telephone base3	Message alert tone	23
Installation4	Telephone base settings	24
Telephone base installation5	Menu settings	24
Charger installation6	Ringer volume	24
Battery installation and charging7	Ringer tone	25
Installation options9	LCD language	25
Tabletop to wall	Voicemail (visual message	
mount installation9	waiting) indicator	25
Wall mount to	Clear voicemail indication	26
tabletop installation11	Key tone	26
•	Set date/time	27
Telephone settings	Use caller ID to automatically	
Handset settings13	set date and time	28
Menu settings13	Home area code	28
Ringer volume13	Dial mode	29
Ringer tone13	Website	
LCD Language14	Making, answering, and ending calls.	
Voicemail (visual message	Making a call	
waiting) indicator14	On hook dialing (predialing)	30
Clear voicemail indication14	Answering a call	30
Key tone15	Temporary ringer silencing	
Set date/time15	Ending a call	
Use caller ID to automatically	Auto off	31
set date and time16	Clearspeak™ dial-in-base	
Home area code17	speakerphone	
Dial mode17	Cordless handset speakerphone.	31
Website18	Redial	
Answering system settings	Last number redial	
(handset only)19	Exiting the menu	
Announcement19	Handset operation	
Answer on/off20	Equalizer	34

Volume control 35	Save a call log entry to
Call waiting35	the directory56
Mute 35	Reasons for missing
Options while on calls35	caller ID information58
Chain dialing36	
Temporary tone dialing 37	Answering system
	About the answering system59
Multiple handset use	Answering system and voicemail59
Multiple handset use38	Answering system new
Handset locator38	message indication59
Join a call in progress38	Turn the answering system on
Intercom39	or off at the telephone base 60
Answer an incoming call during	Message capacity60
an intercom call40	Voice prompts60
Call transfer using intercom 41	Call screening at the
	telephone base61
Directory	Call intercept61
About the directory43	Base ringer 61
Shared directory43	Temporarily turning off the
Capacity43	message alert tone61
Create directory entries44	Message playback62
To create a new directory entry 44	Options during playback62
To add a predialed telephone	To delete all old messages63
number to the directory47	Recording and playing memos 64
Review directory48	To record a memo64
To review directory entries 48	To play back a memo64
Search directory49	Base message counter displays 65
To search by name49	Remote access66
To dial, delete or edit entries50	
Display dial50	Appendix
To delete an entry50	Expansion handset68
To edit an entry50	Adding and registering handsets 69
	To register a handset to your
Caller ID	telephone base69
About caller ID52	Deregistering a handset70
Information about caller ID with	To deregister all handsets70
call waiting52	
Caller ID history53	Handset screen icons71
How the caller ID history	Handset alert tones71
(call log) works53	·
Missed (new) calls indicator 53	Telephone base tones72
Caller ID operation54	Lights72
Memory match54	Handset and telephone base
To review the caller ID history 54	display screen messages73
View dialing options55	Troubleshooting
Dial a call log entry56	Maintenance84
Delete entries56	Important safety information85

Safety information	35
Especially about	
cordless telephones	36
Precautions for users of	
implanted cardiac pacemakers 8	36
Pacemaker patients8	36
Especially about telephone	
answering systems8	36
FCC Part 68 and ACTA	37
FCC Part 15	88
Limited warranty8	39
Technical specifications	
DECT 6.0 digital technology	
Telephone operating range	
Redefining long range coverage	
and clarity	91
,	
Index	
Index9	92
Remote access wallet card	

Quick reference quide - handset

CHARGE indicator

On when the handset is charging.

▼CID/-VOLUME

Press **VCID** to show the caller ID history (page 54).

Press to scroll down while in menus

While entering names or numbers, press to move the cursor to the left.

Press to decrease the listening volume when on a call.

\ PHONE/FLASH

Press to make or answer a call. During a call, press to answer an incoming call when you receive a call waiting alert (page 35).

1

While reviewing a call log entry, press repeatedly to add or remove 1 in front of the telephone number before dialing or saving it in the directory (page 55).

TONE X

If you have pulse dialing, press during a call to switch to tone dialing temporarily (page 37).

●)/SPEAKER

Press to switch between speakerphone and handset (page 31).

MUTE/DELETE

During a call, press to mute the microphone (page 35). While reviewing the caller ID history, the directory or the redial memory, press to delete an individual entry (page 56, page 50 and page 32 respectively).

While predialing, press to delete digits (page 30).

MENU/SELECT

Press to show the menu. While in the menu, press to select an item or save an entry or setting.

▲DIR/VOLUME+

Press **▲DIR** to show directory entries (page 48).

Press to scroll up while in menus.

While entering names or numbers, press to move the cursor to the right.

Press to increase the listening volume when on a call.

Ø OFF/CLEAR

During a call, press to hang up. While in a menu, press to cancel an operation, back up to the previous menu, or exit the menu display.

<u>Press and hold</u> while the telephone is not in use to erase the missed calls indicator.

(pound key)

Press repeatedly to display other dialing options when reviewing a call log entry (page 55).

REDIAL/PAUSE

Press repeatedly to view the last 20 numbers dialed (page 32).

While entering numbers, press and hold to insert a dialing pause (page 44).

INT

Press to begin an intercom conversation (page 39) or to transfer a call (page 41).



at&t

VOLUM

MENU

SELECT

TUV 8

DIR

CLEAR

DEF

мио6

wxyz**Q**

CID

PHONE


TONE

SPEAKER DELETE

MUTE

REDIAL

Quick reference quide - handset

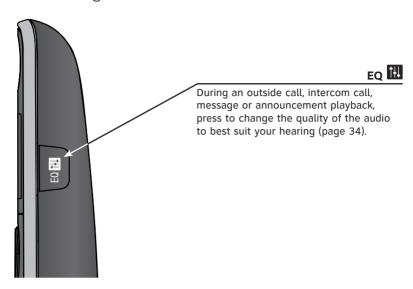

Main menu

The > symbol highlights a menu item.





- Main menu

Play messages (page 62)

Answering sys (page 59)

Directory (page 43)

Call log (page 54)

Ringers (page 13)

Settings (page 14)

Website (page 18)

Using menus

Press **MENU/SELECT** to show the first menu item, **Play messages**.

Press **▼CID** or **△DIR** to scroll through menu items.

Press **MENU/SELECT** to confirm or save changes to a highlighted menu item.

Press **OFF/CLEAR** to cancel an operation, back up to the previous menu, or exit the menu display.

Quick reference quide - telephone base

FLASH

During a call, press to answer an incoming call when you receive a call waiting alert (page 35).

CANCEL

While using menus, press to cancel an operation, back up to the previous menu or exit the menu display.

▼/CID

Press when the phone is idle to display the call history (page 54).

Press to scroll down while in menus and lists.

While entering numbers or letters, press to move the cursor to the left.

MENU/SELECT

Press to show the menu. While in the menu, press to confirm or save an entry or setting.

▲/DIR

Press when the phone is idle to display the directory (page 48).

Press to scroll up while in menus and lists.

While entering or modifying names, press to move the cursor to the right.

INTERCOM

While the phone is idle, press to initiate an intercom call (page 39).

IN USE indicator

On when the telephone is in use, or when the answering system is answering an incoming call.

On when a handset is being registered.

Flashes when there is an incoming call or when a handset is being deregistered.

Flashes when another telephone is in use on the same line.

ELOCATOR

While the phone is idle, press to page all handsets (page 38).

ർ/ANSWER ON

Press to turn the built-in answering system on or off (page 60).

▶/■ /PLAY/STOP

Press to start or stop message playback (page 62).

Flashes when there are new messages or memos in the answering system.

X/DELETE

Press to delete the message currently playing. When in idle mode, press twice to delete all old messages (page 63).

≪/REPEAT

Press to repeat the message; press twice to play the previous message (page 63).

/SKIP

Press to skip the message (page 62).

▲▼/VOLUME

During message playback, press to adjust the listening volume (page 62).

While in idle mode, press to adjust the base ringer volume (page 61).

REDIAL/PAUSE

Press to access the last 20 numbers dialed (page 33).

While predialing or entering numbers into your directory, <u>press and hold</u> to insert a dialing pause (page 45).



TONE X

If you have pulse dialing, press during a call to switch to tone dialing temporarily (page 37).

MUTE

Press to turn off the microphone; press again to resume your conversation (page 35).

SPEAKER **◄**))

Press to switch between speakerphone and corded handset (page 30).

You must install and charge the battery before using the telephone.



See pages 7-8 for easy instructions.

Install the telephone base close to a telephone jack and a power outlet not controlled by a wall switch. The telephone base can be placed on a flat surface or vertically mounted on the wall (see page 9). For optimum range and better reception, place the telephone base in a central and open location.

If you subscribe to high-speed Internet service (DSL - digital subscriber line) through your telephone line, you must install a DSL filter between the telephone line cord and the telephone wall jack (see the following page). The filter prevents noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.

Your product may be shipped with a protective sticker covering the handset or telephone base display - remove it before use.

For customer service or product information, visit our website at

www.telephones.att.com or call 1 (800) 222-3111. In Canada, dial 1 (866) 288-4268.


Avoid placing the telephone base too close to:

- Communication devices such as television sets, VCRs, or other cordless telephones.
- Excessive heat sources.
- Noise sources such as a window with traffic outside, motors, microwave ovens, refrigerators, or fluorescent lighting.
- Excessive dust sources such as a workshop or garage.
- Excessive moisture.
- · Extremely low temperature.
- Mechanical vibration or shock such as on top of the washing machine or workbench.

Telephone base installation

Install the telephone base as shown below.

The telephone base is ready for tabletop use. If you want to change to wall mounting, see page 9 for details.

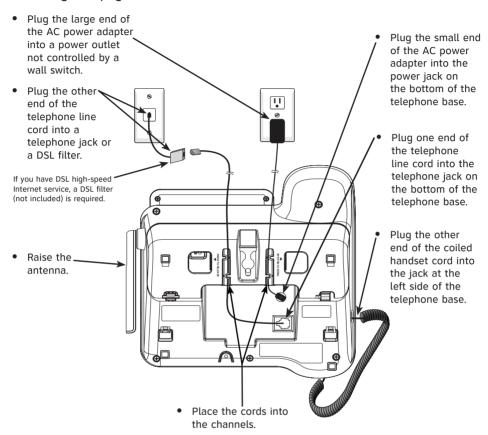


NOTE: This telephone provides minimal functionality during a power outage. When AC power is not available, many telephone features do not function. The telephone uses power from the telephone line to enable you to make and answer calls using only the corded handset and dial pad keys. However, when more than one telephone on the same line is being used simultaneously, there might not be sufficient power to operate your telephone in the event of a power failure.

IMPORTANT INFORMATION

- Use only the power adapter(s) supplied with this product. To order a replacement power adapter, visit our website at www.telephones.att.com or call 1 (800) 222-3111. In Canada, dial 1 (866) 288-4268.
- 2. The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.

Charger installation

Install the charger as shown below.

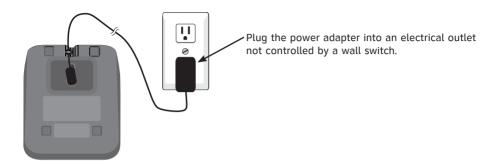

IMPORTANT INFORMATION

- Use only the power adapter(s) supplied with this product. To order a replacement power adapter, visit our website at www.telephones.att.com or call 1 (800) 222-3111. In Canada, dial 1 (866) 288-4268.
- 2. The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.

Battery installation and charging

Install the cordless handset battery as shown below. Once you have installed the battery, the screen indicates the battery status (see table below). If necessary, place the handset in the handset charger to charge the battery. For best performance, keep the handset in the handset charger when not in use. The battery is fully charged after 16 hours of continuous charging. See the table on page 91 for battery operating times.

If the screen shows **Place in charger** and Ω flashes, you need to charge the handset without interruption for at least 30 minutes to give the handset enough charge to use the telephone for a short time. The following table summarizes the battery charge indicators and actions to take.

Battery indicators	Battery status	Action
The screen is blank or	Battery has no or very	Charge without interruption until
shows Place in charger and	little charge. The handset	the screen shows Low battery or
(flashing).	cannot be used.	HANDSET X (at least 30 minutes).
The screen shows	Battery has enough charge	Charge without interruption until
Low battery and () (flashing).	to be used for a short time.	the screen shows HANDSET X
		(at least 30 minutes).
The screen shows	Battery is charged.	To keep the battery charged,
HANDSET X.		place it in the handset charger
		when not in use.



NOTE: If you are on a phone call in low battery mode, you hear four short beeps every minute.



Step 1

Plug the battery connector securely into the socket inside the handset battery compartment, matching the color-coded label. Insert the supplied battery with the label **THIS SIDE UP** facing up as indicated.



Step 2

Align the cover flat against the battery compartment, then slide it upwards until it clicks into place.

Battery installation and charging

CHARGE light



Step 3

Charge the handset by placing it face forward in the charger. The **CHARGE** light on the top of the handset is on during charging.

After you install your telephone or power returns following a power outage, the handset will prompt you to set the date and time. For instructions, see **Set date/time** on page 15. To skip setting the date and time, press **OFF/CLEAR**.





IMPORTANT INFORMATION


- Use only the supplied rechargeable battery or replacement battery (model BT166342).
 To order, visit our website at www.telephones.att.com or call
 1 (800) 222-3111. In Canada, dial 1 (866) 288-4268.
- 2. If you do not use the handset for a long time, disconnect and remove the battery to prevent possible leakage.

The telephone base comes with a mount bracket set for tabletop use. If you want to mount your telephone on a wall, swivel the mount bracket down so the telephone can connect with a standard dual-stud telephone wall mounting plate. If you do not have this mounting plate, you can purchase one from many hardware or consumer electronics retailers. You might need a professional to install the mounting plate.


Tabletop to wall mount installation

To install the telephone base in the wall mount position, make sure that you first unplug all cords connected to the telephone base.


1. Press in as the arrows indicate. The bracket will detach from the telephone base. Swivel it down into wall mount position, making sure it clicks into place.

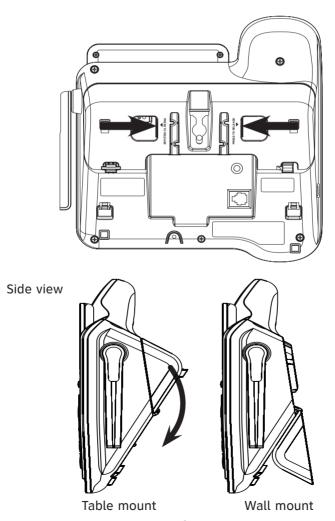


2. Remove the handset tab from the telephone base. Rotate and replace it to hold the corded handset securely in place when the telephone base is mounted on the wall.

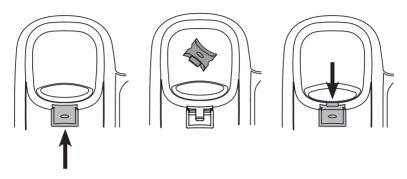

- 3. Connect the telephone line cord and power adapter cord to the jacks on the bottom of the telephone base. If necessary, bundle the telephone cord and power adapter cord, and secure them with twist ties. Plug the power adapter and telephone line into the wall outlets.
- 4. If necessary, place the bundled telephone line cord and power adapter cord into the cavity under the telephone base as shown below. Align the mounting studs on the telephone outlet plate with the mounting holes on the bracket.

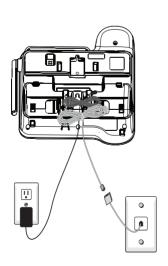


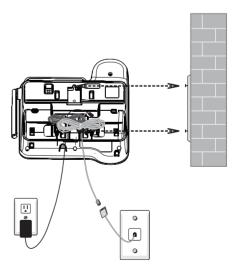


Wall mount to tabletop installation

To change the telephone base from the wall mount position to tabletop position:

- 1. Remove the telephone base from the wall.
- 2. If necessary, untie the bundled telephone cord and power adapter cord. Make sure that you unplug the power adapter and telephone line cord from the wall outlets before you begin.
- 3. Push as indicated by arrows in the illustration until the bracket is released, and then swivel it upward until it clicks into the tabletop position.

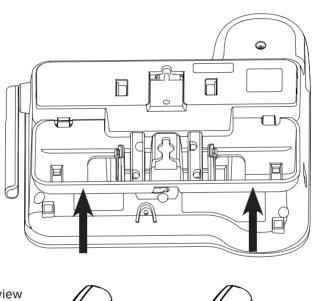


Side view

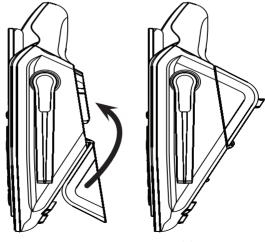


Wall mount

Table mount

4. Connect the telephone line cord and power adapter cord to the jacks on the bottom of the telephone base. Plug the power adapter and telephone line into the wall outlets.

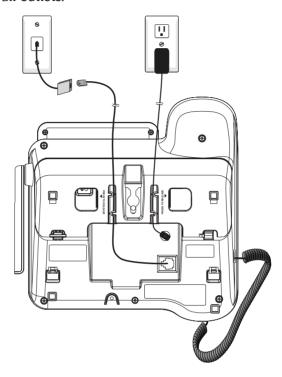

5. Remove the handset tab from the telephone base. Rotate and replace for tabletop use.

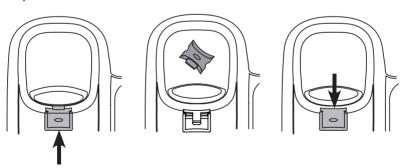

Menu settings

You can use the handset menu to change settings. Refer to page 24 to change the telephone base settings.

- 1. Press **MENU/SELECT** when in idle mode (when the phone is not in use) to enter the main menu.
- Press ▼CID or ▲DIR to scroll to the feature to be changed.
 When scrolling through the menu, the > symbol indicates
 the selected menu item.

Answering sus Directory

3. Press MENU/SELECT to confirm the highlighted item.



NOTE: Press OFF/clear to cancel an operation, back up to the previous menu or exit the menu display. Press and hold OFF/clear to return to idle mode.

Ringer volume

You can set the ringer volume level (1-6) to one of six levels or turn the ringer off. When the ringer is off, $\mathfrak A$ appears on the screen.

- 1. Press MENU/SELECT in idle mode to enter the main menu.
- 2. Use **▼CID** or **▲DIR** to scroll to **>Ringers**.
- 3. Press MENU/SELECT twice to select >Ringer volume.
- Press ▼CID or ▲DIR to sample each volume level.
- Press MENU/SELECT to save your preference. There is a confirmation tone and the screen returns to the main menu. Press OFF/CLEAR to cancel.

NOTE: The handset ringer volume also determines the ringer volume for intercom calls (page 39). If the ringer volume is set to off, that handset is



Settings

>Rin9er volume Rin9er tone

Ê





You can choose one of 10 ringer tones.

silenced for all incoming calls.

- 1. Press **MENU/SELECT** in idle mode to enter the main menu.
- 2. Use **▼CID** or **△DIR** to scroll to **>Ringers**, then press **MENU/SELECT**.
- Press ▼CID or ▲DIR to scroll to >Ringer tone, then press MENU/SELECT.
- 4. Press **▼CID** or **△DIR** to sample each ringer tone.
- 5. Press MENU/SELECT to save your preference and return to the main menu. Press OFF/CLEAR to cancel.

Ringer volume >Ringer tone

RINGER TONE >Tone 1

Î



NOTE: If you turn off the ringer volume, you do not hear ringer tone samples.

LCD language

You can select the language used for all handset screen displays.


- 1. Press MENU/SELECT in idle mode to enter the main menu.
- 2. Use **▼CID** or **△DIR** to scroll to **>Settings**.
- 3. Press MENU/SELECT twice to select >LCD language.
- Press ▼CID or ▲DIR to highlight English, Français or Español.
- 5. Press MENU/SELECT to save your preference and return to the main menu. Press OFF/CLEAR to cancel.





Voicemail (visual message waiting) indicator

If you subscribe to a voicemail service offered by your telephone service provider, this feature provides a visual indication on the handset screen when you have new voicemail messages.

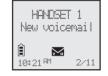

New voicemail and **⋈** appear on the handset screen.



NOTES:

- 1. This feature does not indicate new messages recorded on your phone's built-in answering system.
- 2. For more information about the difference between your answering system and voicemail, see page 59.

Clear voicemail indication

Use this feature when the telephone indicates there is new voicemail but there is none. For example, when you have accessed your voicemail while away from home. This feature only turns off the displayed **New voicemail** and **⋈**; it does not delete your voicemail messages. As long as you have new voicemail messages, your telephone service provider continues to send the signal to turn on the indicators.

To manually turn off the new voicemail indicators on the handset:

- Press MENU/select when in idle mode to enter the main menu.
- Use ▼CID or ▲DIR to scroll to >Settings, then press MENU/SELECT.
- 3. Use ▼CID or ▲DIR to scroll to >Clr voicemail, then press MENU/SELECT. The screen shows Turn off indicator?
- 4. Press MENU/SELECT again to turn the voicemail indication off. There is a confirmation tone. Press OFF/CLEAR to cancel.







- 1. Your telephone service provider voicemail might alert you to new messages with a stutter (broken) dial tone. Contact your telephone service provider for more details.
- For information about using your voicemail service, contact your telephone service provider for assistance

Key tone

The handset is set to beep with each key press. If you turn off the key tone, there are no beeps when you press keys.

- 1. Press **MENU/SELECT** in idle mode to enter the main menu.
- 2. Use **▼CID** or **△DIR** to scroll to **>Settings**, then press **MENU/SELECT**.
- Use ▼CID or ▲DIR to scroll to >Key tone, then press MENU/SELECT.
- 4. Press ▼CID or ▲DIR to highlight On or Off.
- 5. Press MENU/SELECT to save your preference and return to the main menu. Press OFF/CLEAR to cancel.





Set date/time

The answering system announces the day and time of each message prior to playing it. Before using the answering system, set the date and time as follows. If you subscribe to caller ID service, the day, month and time are set automatically with each incoming call. The year must be set so that the day of the week can be calculated from the caller ID information. You can turn off the date and time settings of the caller ID service and use your own settings for each incoming call (see the **Use caller ID to automatically set date and time** section on the following page).

After a power failure, handset registration or deregistration, the system reminds you to set the date and time for backup before entering the idle mode.

Follow the steps below to set the month, day, year and time on the handset.

- 1. When the handset is in idle mode, press **MENU/SELECT** to enter the main menu.
- Press ▼CID or ▲DIR to scroll to >Settings, then press MENU/SELECT.
- 3. Press ▼CID or ▲DIR to scroll to >Set date/time.
- 4. Press MENU/SELECT twice to select >Date & time.
- 5. Press ▼CID or ▲DIR to select the month then press MENU/SELECT, or enter the number using the dial pad keys.





- Press ▼CID or ▲DIR to select the day then press MENU/SELECT, or enter the number using the dial pad keys.
- Press ▼CID or ▲DIR to select the year then press MENU/SELECT, or enter the number using the dial pad keys, then press MENU/SELECT to confirm.
- SET DATE
 --/--/--
- Press ▼CID or ▲DIR to select the hour then press MENU/SELECT, or enter the number using the dial pad keys.
- Press ▼CID or ▲DIR to select the minute then press MENU/SELECT, or enter the number using the dial pad keys.
- 10. Press ▼CID or ▲DIR to select AM or PM, then press MENU/SELECT to confirm. There is a confirmation tone. Press OFF/CLEAR to cancel.





NOTE: If the clock is not set when a message is recorded, the system announces, "Time and day not set," before it plays the message.

Use caller ID to automatically set date and time

You can choose if the date and time are automatically set by incoming caller ID. The default setting is **On**.

- When the handset is in idle mode, press MENU/SELECT to enter the main menu.
- 2. Press ▼CID or ▲DIR to scroll to >Settings, then press MENU/SELECT.
- Press ▼CID or ▲DIR to scroll to >Set date/time, then press MENU/SELECT.
- 4. Press ▼CID or ▲DIR to scroll to >CID time sync, then press MENU/SELECT.
- Press ▼CID or ▲DIR to select On or Off, then press MENU/SELECT to confirm. There is a confirmation tone.

>Settings Website

Date & time XCID time sync

CID TIME SYNC XOn

Home area code

If you dial seven digits to make a local call (no area code required), enter your area code into the telephone as the home area code. When you receive a call from within your home area code, the caller ID history only displays the seven digits of the telephone number.

This feature makes it easy for you to place a call from the caller ID log. If you dial 10 digits to make a local phone call, do not use this home area code feature. If you do, you cannot place local calls from your caller ID log, as they will have only seven digits.

To set the home area code on a cordless handset:

- 1. Press **MENU/select** in the idle mode to enter the main menu.
- 2. Use **▼CID** or **△DIR** to scroll to **>Settings**, then press **MENU/SELECT**.
- 3. Use **▼CID** or **△DIR** to scroll to **>Home area code**, then press **MENU/SELECT**.
- 4. Use the dial pad keys to enter a three-digit home area code. Press MUTE/DELETE to delete a digit while entering, or press and hold MUTE/DELETE to delete all digits.
- 5. Press MENU/SELECT to save and return to the main menu.

 There is a confirmation tone. Press OFF/CLEAR to cancel.









NOTE: If, in the future, your telephone service provider requires you to dial 10 digits to make a local call (area code plus telephone number), you need to delete your home area code and dial out locally from the call log. With the home area code displayed, <u>press and hold</u> **X/DELETE** until the digits are deleted, and then press **MENU/SELECT.** The home area code is now restored to its default setting of _ _ _(empty).

Dial mode

The dial mode is preset to tone dialing. If you have pulse (rotary) service, you must change the dial mode to pulse dialing before using the telephone.

To set the dial mode on a cordless handset:

- 1. Press **MENU/select** in the idle mode to enter the main menu.
- 2. Use **▼CID** or **△DIR** to scroll to **>Settings**, then press **MENU/SELECT**.
- 3. Use **▼CID** or **△DIR** to scroll to **>Dial mode**, then press **MENU/SELECT**.
- Use ▼CID or ▲DIR to scroll to >Tone or >Pulse, then press MENU/SELECT. There is a confirmation tone. Press
 OFF/CLEAR to cancel.



DIAL MODE >Tone

Website

Use this feature to view the AT&T website address.

- 1. Press **MENU/SELECT** in idle mode to enter the main menu.
- 2. Use **▼CID** or **△DIR** to scroll to **>Website**, then press **MENU/SELECT**.
- 3. Press **OFF/cLEAR** to cancel.

Settings >Website



ww.telephones. att.com



Use the answering system menu of any system handset to set or change the outgoing announcement, call screening, number of rings, remote access and message alert tone settings.

- 1. When the handset is in idle mode, press **MENU/SELECT** to enter the main menu.
- Press ▼CID or ▲DIR to scroll to >Answering sys, then press MENU/SELECT.

Play messages >Answering sys

Announcement

Your outgoing announcement plays when calls are answered by the answering system.

The telephone has a default outgoing announcement, "Hello. Please leave a message after the tone." You can use this announcement, or record your own announcement.

You can record an announcement up to 90 seconds. The system does not record any announcement shorter than two seconds.

To play your current outgoing announcement:

- 1. When the handset is in idle mode, press **MENU/SELECT** to enter the main menu.
- 2. Press ▼CID or ▲DIR to scroll to >Answering sys, then press MENU/SELECT.
- 3. Press MENU/SELECT again to select >Announcement. The system announces, "To play, press 2. To record, press 7."
- 4. Press 2 to play the current announcement.


To record a new outgoing announcement:

- 1. When the handset is in idle mode, press **MENU/SELECT** to enter the main menu.
- 2. Press ▼CID or ▲DIR to scroll to >Answering sys, then press MENU/SELECT.
- 3. Press MENU/SELECT again to select >Announcement. The system announces, "To play, press 2. To record, press 7."
- 4. Press **7** to record an announcement. The system announces, "Record after the tone. Press **5** when you are done."
- 5. Facing the handset, record your announcement and press **5** to end recording. Your recorded announcement plays.

To listen to the recorded announcement again, press **2** after playback is completed.





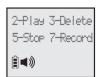



To delete your outgoing announcement:

- When the handset is in idle mode, press MENU/SELECT to enter the main menu.
- Press ▼CID or ▲DIR to scroll to >Answering sys, then press MENU/SELECT.
- 3. Press MENU/SELECT again to select >Announcement. The system announces, "To play, press 2. To record, press 7."
- 4. Press 3 to delete your recorded announcement.

When your announcement is deleted, the system answers calls with the default announcement described on the previous page.



Answer on/off

Unless you change it, the answering system is on and ready to record messages. You can turn the answering system off, but if you do so, the answering system does not answer calls and record incoming messages.

To turn the answering system on or off from a cordless handset:

- When the handset is in idle mode, press MENU/SELECT to enter the main menu.
- 2. Press ▼CID or ▲DIR to scroll to >Answering sys, then press MENU/SELECT.
- Press ▼CID or ▲DIR to scroll to >Answer ON/OFF, then press MENU/SELECT.
- Press ▼CID or ▲DIR to highlight On or Off, then press MENU/SELECT to confirm. You hear a confirmation tone. Press OFF/CLEAR to cancel.

If the answering system is on, the handset screen shows **ANS ON**.









- If the answering system is off and there is an incoming call, the system answers after 10 rings and announces, "Please enter your remote access code." For more information about remote access codes, see page 66.
- 2. If you change any answering system settings, the system automatically turns on and will answer incoming calls.

Call screening

Use this feature to choose whether incoming messages can be heard over the telephone base speaker when they are being recorded. If you turn call screening on, you hear the incoming message. While monitoring an incoming message, you can answer the call by pressing **PHONE/FLASH** or **PHONE/FLASH**

To change the setting:

- 1. When the handset is in idle mode, press **MENU/SELECT** to enter the main menu.
- Press ▼CID or ▲DIR to scroll to >Answering sys, then press MENU/SELECT.
- 3. Press ▼CID or ▲DIR to scroll to >Ans sys setup.
- Press MENU/SELECT twice to select >Call screening.
- Press ▼CID or ▲DIR to choose On or Off.
- 6. Press MENU/SELECT to confirm your setting and you hear a confirmation tone. Press OFF/CLEAR to cancel.



NOTE: For more information on call screening, see page 61.

Play messages >Answering sys

...

Ars sus setur -End of list-

Ê

>Call screenin9 # of rin9s @

CALL SCREENING >On

Number of rings

You can set the answering system to answer an incoming call after two, four, or six rings. You can also select toll saver, which is explained below. Unless you change it, the answering system answers an incoming call after four rings.

To set the number of rings:

- When the handset is in idle mode, press MENU/select to enter the main menu.
- 2. Press ▼CID or ▲DIR to scroll to >Answering sys, then press MENU/SELECT.
- 3. Press ▼CID or ▲DIR to scroll to >Ans sys setup, then press MENU/SELECT.
- 4. Press ▼CID or ▲DIR to scroll to ># of rings, then press MENU/SELECT.
- 5. Press **▼CID** or **△DIR** to scroll and choose among **2**, **4**, **6** or **Toll saver**.
 - Toll saver the answering system answers a call after two rings if you have new messages, and after four rings when there are no new messages. This feature allows you to check for new messages and avoid paying long distance charges when calling from out of your local area.

># of rings Remote code

OF RINGS >2

6. Press MENU/SELECT to confirm your setting and you hear a confirmation tone. Press OFF/CLEAR to cancel.



NOTE: If you subscribe to voicemail service through your telephone service provider, see **Answering system and voicemail** on page 59.

Remote access code

To access your answering system remotely from any touch-tone phone, you need to enter a two-digit number (00-99). Unless you change it, the remote access code is 19.

To change the remote access code:

- 1. When the handset is in idle mode, press **MENU/SELECT** to enter the main menu.
- 2. Press ▼CID or ▲DIR to scroll to >Answering sys, then press MENU/SELECT.
- 3. Press ▼CID or ▲DIR to scroll to >Ans sys setup, then press MENU/SELECT.
- Press ▼CID or ▲DIR to scroll to >Remote code, then press MENU/SELECT.
- 5. Use the dial pad to enter a two-digit number. Use MUTE/DELETE to backspace and delete a digit.
- 6. Press MENU/SELECT to confirm your setting and you hear a confirmation tone. Press OFF/CLEAR to cancel.

Play messages >Answering sys







Message alert tone

When the message alert tone is set to \mathbf{ON} , and there is at least one new message, the telephone base beeps every 10 seconds. Unless you change it, the message alert tone is set to off.

There is no audible alert at the handset.

To change the setting:

- 1. When the handset is in idle mode, press **MENU/SELECT** to enter the main menu.
- Press ▼CID or ▲DIR to scroll to >Answering sys, then press MENU/SELECT.
- Press ▼CID or ▲DIR to scroll to >Ans sys setup, then press MENU/SELECT.
- Press ▼CID or ▲DIR to scroll to >Msg alert tone, then press MENU/SELECT.
- Press ▼CID or ▲DIR to choose On or Off.
- 6. Press MENU/SELECT to confirm your setting and you hear a confirmation tone. Press OFF/CLEAR to cancel.



- 1. The message alert tone beeps only if all the conditions below are met:
 - Answering system is on.
 - Message alert tone setting is on.
 - There are new messages.
- 2. To temporarily turn off the message alert tone, see page 61.

Play messages >Answering sys ()

)Ans sus setup —End of list—

Î

Me9 alert tone —End of list—

Ê

MSG ALERT TONE >On

Ê

Menu settings

You can use the base menu to change settings. Refer to page 13 to change the handset settings.

- 1. Press **MENU/SELECT** when in idle mode (when the phone is not in use) to enter the main menu.
- Press ▼/CID or ▲/DIR to scroll to the feature to be changed. When scrolling through the menu, the > symbol indicates the selected menu item.
- 3. Press MENU/SELECT to confirm.



>Play messages Answering sys



NOTE: To cancel an operation, back up to the previous menu or exit the menu display, press and hold **CANCEL** to return to idle mode.

Ringer volume

You can set the ringer volume level (1-6) to one of six levels or turn the ringer off. When the ringer is off, \mathfrak{Q} appears on the telephone base screen.

- Press MENU/SELECT in idle mode to enter the main menu.
- 2. Use **▼/CID** or **▲/DIR** to scroll to **>Ringers**, then press MENU/SELECT.
- 3. Press MENU/SELECT again to select >Ringer volume.
- 4. Press **▼/CID** or **▲/DIR** to sample each volume level.
- Press MENU/SELECT to save your preference. There is a confirmation tone and the screen returns to the main menu. Press CANCEL to exit.

>Rin9ers Settings

>Rin9er volume Rin9er tone



-OR-

Press $\triangle \nabla/\text{VOLUME}$ on the telephone base in idle mode to change the ringer volume.

RINGER VOLUME Ringer off

Ð

NOTE: The telephone base ringer volume also determines the ringer volume for intercom calls (page 39). If the ringer volume is set to off, that base ringer is silenced for all incoming and intercom calls.

Ringer tone

You can choose one of 10 ringer tones.

- 1. Press MENU/SELECT in idle mode to enter the main menu.
- Use ▼/CID or ▲/DIR to scroll to >Ringers, then press MENU/SELECT.
- 3. Press ▼/CID or ▲/DIR to scroll to >Ringer tone, then press MENU/SELECT.
- 4. Press **▼/CID** or **▲/DIR** to sample each ringer tone.
- Press MENU/SELECT to save your preference. There is a confirmation tone and the screen returns to the main menu. Press CANCEL to exit.

Ringer volume >Ringer tone

RINGER TONE >Tone 1



NOTE: If you turn off the ringer volume, you do not hear ringer tone samples.

LCD Language

You can select the language used for all screen displays on the telephone base.

To select a language on the telephone base:

- Press MENU/SELECT in idle mode to enter the main menu.
- 2. Use **▼/CID** or **▲/DIR** to scroll to **>Settings**.
- 3. Press MENU/SELECT twice to select >LCD language.
- 4. Press ▼/CID or ▲/DIR to highlight English, Français or Español.
- 5. Press MENU/SELECT to save your preference and return to the main menu. Press CANCEL to exit.

Ringers >Settings

>LCO language | Clr voicemail

LCD LANGUAGE >English

Voicemail (visual message waiting) indicator

If you subscribe to a voicemail service offered by your telephone service provider, this feature provides a visual indication on the telephone base when you have new voicemail messages.

845E New voicemail 01 10:01≈ № 11/20

New voicemail and **⋈** appear on the telephone base screen.



- 1. This feature does not indicate new messages recorded on your phone's built-in answering system.
- For more information about the difference between your answering system and voicemail, see page 59.

Clear voicemail indication

Use this feature when the telephone indicates there is new voicemail but there is none. For example, when you have accessed your voicemail while away from home. This feature only turns off the displayed **New voicemail** and **\sqrt{s}**; it does not delete your voicemail messages. As long as you have new voicemail messages, your telephone service provider continues to send the signal to turn on the indicators.

To manually turn off the new voicemail indicators on the telephone base:

- Press MENU/SELECT when in idle mode to enter the main menu.
- 2. Use ▼/CID or ▲/DIR to scroll to >Settings, then press MENU/SELECT.
- 3. Use ▼/CID or ▲/DIR to scroll to >Clr voicemail, then press MENU/SELECT. The screen shows Turn off indicator?
- 4. Press MENU/SELECT again to turn the voicemail indication off. There is a confirmation tone. Press CANCEL to cancel.



 $\searrow_{\scriptscriptstyle{M}}$

LCO language



- 1. Your telephone service provider might alert you to new messages with a stutter (broken) dial tone. Contact your telephone service provider for more details.
- For information about using your voicemail service, contact your telephone service provider for assistance.

Key tone

The telephone base is set to beep with each key press. If you turn off the key tone, there are no beeps when you press keys.

- 1. Press MENU/SELECT in idle mode to enter the main menu.
- Use ▼/CID or ▲/DIR to scroll to >Settings, then press MENU/SELECT.
- Use ▼/CID or ▲/DIR to scroll to >Key tone, then press MENU/SELECT.
- Press ▼/CID or ▲/DIR to highlight On or Off.
- 5. Press **MENU/SELECT** to save your preference and return to the main menu. Press **CANCEL** to cancel.

Xey tone Set date/time

KEY TONE >Off

Set date/time

The answering system announces the day and time of each message prior to playing it. Before using the answering system, set the date and time as follows. If you subscribe to caller ID service, the day, month and time are set automatically with each incoming call. The year must be set so that the day of the week can be calculated from the caller ID information. You can turn off the date and time settings of the caller ID service and use your own settings for each incoming call (see the **Use caller ID to automatically set date and time** section on the following page).

After a power failure or handset deregistration, the system needs to reset the date and time.

Follow the steps below to set the month, day, year and time on the telephone base.

1. When the telephone base is in idle mode, press **MENU/SELECT** to enter the main menu.

- Press ▼/CID or ▲/DIR to scroll to >Settings, then press MENU/SELECT.
- 3. Press **▼/CID** or **▲/DIR** to scroll to **>Set date/time**.
- 4. Press MENU/SELECT twice to select >Date & time.
- Press ▼/CID or ▲/DIR to choose the month then press MENU/SELECT, or enter the number using the dial pad keys.
- Press ▼/CID or ▲/DIR to choose the day then press MENU/SELECT, or enter the number using the dial pad keys.
- Press ▼/CID or ▲/DIR to choose the year then press MENU/SELECT, or enter the number using the dial pad keys, then press MENU/SELECT to confirm.
- Press ▼/CID or ▲/DIR to choose the hour then press MENU/SELECT, or enter the number using the dial pad keys.
- 9. Press ▼/CID or ▲/DIR to choose the minute then press MENU/SELECT, or enter the number using the dial pad keys.
- 10. Press ▼/CID or ▲/DIR to choose AM or PM, then press MENU/SELECT to confirm. There is a confirmation tone. Press CANCEL to cancel.

NOTE: If the clock is not set when a message is recorded, the system announces, "Time and day not set," before it plays the message.

>Set date/time Home area code

>Date & time CID time sync





Use caller ID to automatically set date and time

You can choose if the date and time are automatically set by incoming caller ID. The default setting is on.

- 1. When the telephone base is in idle mode, press **MENU/SELECT** to enter the main menu.
- Press ▼/CID or ▲/DIR to scroll to >Settings, then press MENU/SELECT.
- 3. Press ▼/CID or ▲/DIR to scroll to >Set date/time, then press MENU/SELECT.
- 4. Press ▼/CID or ▲/DIR to scroll to >CID time sync, then press MENU/SELECT.
- Press ▼/CID or ▲/DIR to highlight On or Off, then press MENU/SELECT to confirm. You hear a confirmation tone.

>Set date/time Home area code

Date & time >CID time senc

CID TIME SYNC >On

Home area code

If you dial seven digits to make a local call (no area code required), enter your area code into the telephone as the home area code. When you receive a call from within your home area code, the caller ID history only displays the seven digits of the telephone number.

This feature makes it easy for you to place a call from the caller ID log. If you dial 10 digits to make a local phone call, do not use this home area code feature. If you do, you cannot place local calls from your caller ID log, as they will have only seven digits.

To set the home area code on the telephone base:

- 1. Press MENU/SELECT in the idle mode to enter the main menu.
- 2. Use **▼/CID** or **▲/DIR** to scroll to **>Settings**, then press **MENU/SELECT**.
- Use ▼/CID or ▲/DIR to scroll to >Home area code, then press MENU/SELECT.
- Use the dial pad keys to enter a three-digit home area code. Press X/DELETE to delete a digit while entering, or press and hold X/DELETE to delete all digits.
- 5. Press **MENU/SELECT** to save and return to the main menu. There is a confirmation tone. Press **CANCEL** to cancel.

Set date/time >Home area code

HOME AREA CODE



NOTE: If, in the future, your telephone service provider requires you to dial 10 digits to make a local call (area code plus telephone number), you need to delete your home area code and dial out locally from the call log. With the home area code displayed, press and hold **X/DELETE** until the digits are deleted, and then press MENU/SELECT. The home area code is now restored to its default setting of _ _ _(empty).

Dial mode

The dial mode is preset to tone dialing. If you have pulse (rotary) service, you must change the dial mode to pulse dialing before using the telephone.

To set the dial mode on the telephone base:

- Press MENU/SELECT in the idle mode to enter the main menu.
- 2. Use ▼/CID or ▲/DIR to scroll to >Settings, then press MENU/SELECT.
- 3. Use ▼/CID or ▲/DIR to scroll to >Dial mode, then press MENU/SELECT.
- Use ▼/CID or ▲/DIR to scroll to >Tone or >Pulse, then press MENU/SELECT. There is a confirmation tone. Press CANCEL to cancel.

Home area code >Dial mode

DIAL MODE >Tone

Website

Use this feature to view the AT&T website address.

- 1. Press **MENU/select** in idle mode to enter the main menu.
- Use ▼/CID or ▲/DIR to scroll to >Website, then press MENU/SELECT.
- 3. Press CANCEL to cancel.

>Website -End of list-

www.telephones. att.com

Making, answering, and ending calls

Making a call

Using a cordless handset:

 Press \ PHONE/FLASH or \()/SPEAKER, then enter the telephone number.

The screen displays the elapsed time as you talk (in hours, minutes and seconds).





NOTE: Pressing \checkmark **PHONE/FLASH** to access services from your telephone service provider does not affect the elapsed time.

Using the telephone base:

 Lift the corded handset or press SPEAKER ◆, then enter the telephone number.

The screen displays the elapsed time as you talk (in hours, minutes and seconds).



On hook dialing (predialing)

Using a cordless handset:

- 1. Enter the telephone number. Press **MUTE/DELETE** or **GOFF/CLEAR** to make corrections when entering the phone number.
- 2. Press \ PHONE/FLASH or ♥ /SPEAKER to dial.

Using the telephone base:

- Use the dial pad keys on the telephone base to enter the telephone number. Press CANCEL or X/DELETE to make corrections as you enter the phone number.
- - -OR-

Lift the corded handset to dial.

Answering a call

Using a cordless handset:

- Press \ PHONE/FLASH or \ SPEAKER.
 - -OR-

Press any dial pad keys (0-9, TONE * or #).

Using the telephone base:

- Lift the corded handset or press SPEAKER ■.
 - -OR-

Press any dial pad keys (0-9, TONE * or #).

Making, answering, and ending calls

Temporary ringer silencing

Press OFF/CLEAR or MUTE/DELETE on a cordless handset, or press MUTE on the telephone base when there is a call to silence the ringer temporarily on that handset or the telephone base only. This turns off the ringer without disconnecting the call. The next incoming call rings normally at the preset volume.





NOTE: Each handset or the telephone base rings when there is an incoming call unless the ringer volume is turned off on that handset or the telephone base.

RINGER VOLUME Ringer off A

Ending a call

Using a cordless handset:

Press OFF/CLEAR or return the handset to the handset charger.

Using the telephone base:

Return the corded handset to the telephone base or press **SPEAKER** ◆ if you are using the speakerphone.


Auto off

A call ends automatically when you put the handset in the telephone base or charger.

(If the base speakerphone is active, placing the corded handset in the base does not end the call.)

Clearspeak™ dial-in-base speakerphone

During a call, you can press **SPEAKER** • on the telephone base to alternate between handsfree speakerphone and corded handset use.

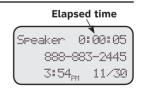

Cordless handset speakerphone

During a call, press **I**/**SPEAKER** on a cordless handset to switch between handsfree speakerphone and normal handset use.



Redial



- If you use the speakerphone during low battery mode, the handset is not lit except for the \$\sqrt{9}\$/SPEAKER button.
- The speakerphone uses more power than regular handset use. If the handset battery becomes very low while you are using the speakerphone, the call remains in speakerphone mode until you hang up or the battery becomes depleted. When the battery is very low, you cannot switch a call from normal handset use to speakerphone mode.
- 3. After installing a battery into the handset, the screen may show **Low battery**. If you use the speakerphone at this time, the battery may become depleted. Follow the instructions in the **Battery installation and charging** section on pages 7-8.

Last number redial

The last 20 telephone numbers dialed (up to 30 digits) are stored in the system memory.

Using a cordless handset:

To view the 20 most recently dialed numbers:

- To display the most recently dialed number, press REDIAL/PAUSE.
- To view up to 20 recently dialed numbers, press REDIAL/PAUSE then ▼CID or ▲DIR, or press REDIAL/PAUSE repeatedly.

Redial 888-883-2445

The handset beeps twice at the end of the list.

Press / OFF/clear to exit.

To redial a number:

- To dial the displayed number, press \ PHONE/FLASH or ♥ / SPEAKER.
 -OR-
- Press \ PHONE/FLASH or \)>SPEAKER, then press REDIAL/PAUSE
 repeatedly to view the redial memory. Press MENU/SELECT to dial the
 displayed number.

To edit a number:

 While the desired number displays, press MENU/SELECT (see step 5 in the To create a new directory entry section on page 44 for details).



To delete a number:

• While the screen displays the desired number, press **MUTE/DELETE** to delete the number from the redial memory.

Redial

Using the telephone base:

To view the 20 most recently dialed numbers:

To display the most recently dialed number (up to 30 digits), press REDIAL/PAUSE.



To view up to 20 recently dialed numbers, press REDIAL/PAUSE then ▼/CID or ▲/DIR, or press REDIAL/PAUSE repeatedly.

The telephone base beeps twice at the end of the list.

Press CANCEL to exit.

To redial a number:

• To dial a displayed number, press $\mathbf{SPEAKER} \blacktriangleleft \!\!\!)$ or lift the corded handset.

-OR-

Press **SPEAKER** ● or lift the corded handset then press **REDIAL/PAUSE** repeatedly to view the redial memory. Press **MENU/SELECT** to dial the displayed number.

To edit a number:

 While the desired number displays, press MENU/SELECT (see step 5 in the To create a new directory entry section on page 45 for details).

To delete a number:

 While the screen displays the desired number, press X/DELETE to delete the number from the redial memory.

Exiting the menu

On the handset, press **OFF/clear** to cancel an operation, back up to the previous menu, or exit the menu display. <u>Press and hold</u> **OFF/clear** to return to idle mode.

-OR-

On the telephone base, press **CANCEL** to cancel an operation, back up to the previous menu, or exit the menu display. <u>Press and hold</u> **CANCEL** to return to idle mode.

If you pause for too long while creating or reviewing an entry, the procedure times out and you have to begin again.

Handset operation

Equalizer

The equalizer feature on the cordless handset enables you to change the quality of the audio to best suit your hearing.

While on a call or an intercom call or listening to a message or announcement, press EQ to select the equalizer setting: Treble 1, Treble 2, Bass or Natural (the default setting). The current setting is shown on the handset screen for two seconds.



- If you switch the call between the cordless handset and speakerphone by pressing ♥೨/SPEAKER, the audio setting remains unchanged.
- 2. The current equalizer setting remains unchanged until a new setting is selected.
- 3. Only the cordless handset has the equalizer feature. The equalizer setting will not change the audio of the base handset or speakerphone.











Options while on calls

Volume control

On a cordless handset:

While on a call, press ▼CID/-VOLUME to decrease or press ▲DIR/VOLUME+ to increase the listening volume. You can set the listening volume to one of five levels.

On the telephone base:

While on a call, press **▼**▲/**VOLUME** to increase or decrease the listening volume.



NOTES:

- 1. Handset and speakerphone volume settings are independent.
- 2. When the volume reaches the minimum or maximum setting, you hear two beeps.

Call waiting

If you subscribe to call waiting service from your telephone service provider, you hear two beeps if someone calls while you are already on a call. Press PHONE/FLASH on the cordless handset or press FLASH on the telephone base to put your current call on hold and take the new call. You can press PHONE/FLASH on the cordless handset or press FLASH on the telephone base at any time to switch back and forth between the calls.



NOTE: Unanswered call waiting calls are not displayed as missed calls on the handset.

Mute

While on a call, use the mute function to turn off the microphone. You can hear the caller, but the caller does not hear you.

To mute a call on a cordless handset:

 Press MUTE/DELETE. When mute is on, the handset screen shows Muted for a few seconds and the MUTE icon displays until you turn off mute.

To take a call off mute on a cordless handset:

 Press MUTE/DELETE again. When mute is off, Microphone ON appears temporarily on the handset screen.

To mute a call on the telephone base:

 Press MUTE. When mute is on, the screen shows Muted for a few seconds and the MUTE button turns red until you turn off mute.





Muted 3:58_{pm} 11/30

Options while on calls

To take a call off mute on the telephone base:

 Press MUTE again. When mute is off, Microphone ON appears temporarily on the screen of the telephone base. Microehone ON 3:58_m 11/30

Chain dialing

Use this feature to initiate a dialing sequence from the numbers in the directory, caller ID history, or redial memory while you are on a call.

Chain dialing can be useful if you wish to access other numbers (such as bank account numbers or access codes) from the directory, caller ID history, or redial list.

To access the directory while on a call:

Using a cordless handset:

- 1. Press MENU/SELECT.
- Press MENU/SELECT again to enter >Directory.
- 3. Press ▼CID or ▲DIR to scroll to the desired number.
- 4. Press MENU/SELECT to dial the number shown.

Using the telephone base:

- Press ▲/DIR to enter the directory.
- 2. Press **▼/CID** or **▲/DIR** to scroll to the desired number.
- 3. Press MENU/SELECT to dial the number shown.

To access the caller ID history (call log) while on a call:

Using a cordless handset:

- 1. Press **MENU/select**.
- Press ▼CID or ▲DIR to scroll to >Call log, then press MENU/SELECT.
- 3. Press ▼CID or ▲DIR to scroll to the desired number.
- 4. Press MENU/SELECT to dial the number shown.

Using the telephone base:

- Press ▼/CID to enter the call log.
- 2. Press ▼/CID or ▲/DIR to scroll to the desired number.
- 3. Press MENU/SELECT to dial the number shown.

To access the redial list while on a call:

- Press REDIAL/PAUSE on a cordless handset or the telephone base to show the most recently dialed number.
- Press ▼CID or ▲DIR on a cordless handset, or press ▼/CID or ▲/DIR on the telephone base to scroll to the desired number, then press MENU/SELECT to dial the number shown.

>Directory
Call log

Directory XCall log

Options while on calls



NOTES

- You cannot edit a directory entry while on a call. For more details about the directory, see page 43.
- 2. You cannot copy a caller ID entry into the directory while on a call. For more details about the caller ID history, see page 52.
- If you press REDIAL/PAUSE while on a call, you can only view the 20 most recently dialed numbers and you cannot erase the entries. For more details about the redial memory, see page 32.
- Press CANCEL on the telephone base to exit redial, directory or caller ID history when on a call.

Temporary tone dialing

If you have pulse (rotary) service only, you can switch from pulse to touchtone dialing temporarily during a call. This is useful if you need to send touch-tone signals to access your telephone banking or long distance services.

- 1. During a call, press TONE X.
- 2. Use the dial pad keys to enter the desired number. The telephone sends touch-tone signals.
- 3. The telephone automatically returns to pulse dialing mode after you end the call.

Multiple handset use

Handset locator

The handset locator feature is useful if you misplace any handsets.

To start the paging tone:

 Press LOCATOR at the telephone base. Paging all handsets appears on the screen and the paging tone sounds on all handsets for 60 seconds.



NOTE: If you press OFF/CLEAR or MUTE/DELETE on a handset, the ringer of that handset stops, but the paging to the rest of the handsets continues.

To stop the paging tone:

 Press \ PHONE/FLASH, ♥)/SPEAKER, or any dial pad keys (0-9, TONE \(\frac{1}{2} \), or #) on the handset(s).

-OR-

Press **FLOCATOR** on the telephone base.







Join a call in progress

If a handset or telephone base is already on a call, you can join the call.

Using a cordless handset:

Press **\ PHONE/FLASH** or **◆)/SPEAKER** on another cordless handset.

Press OFF/CLEAR or place the handset in the handset charger to end the call. The call does not end until all handsets and the telephone base hang up.

Using the telephone base:

Lift the corded handset or press **SPEAKER ●** on the telephone base.

Return the corded handset to the telephone base or press **SPEAKER** ◀ to hang up. The call does not end until all handsets and the telephone base hang up.



NOTE: You can use up to four system handsets and the telephone base at the same time on an outside call.

Intercom

Use the intercom feature for conversations between handsets. You can buy additional expansion handsets (model AT&T CL80100) for this telephone base. You can register up to 12 handsets to the telephone base.

The first nine handset that you register are named **HANDSET 1-9**. Use the handset number to initiate intercom and transfer calls.

Although the names for handsets 10-12 appear in their displays as 10-12, when you intercom or transfer to one of them, you must use *0 for HANDSET 10, *1 for HANDSET 11, and *2 for HANDSET 12.

Using a cordless handset:

- 1. Press **INT** on your handset when not in use.
 - If you have a single handset system, your handset screen shows Calling base. The telephone base rings and its screen shows HANDSET is calling.
 - If you have more than one handset, your screen shows
 INTERCOM TO: Use the dial pad keys to enter a
 handset number. Your handset screen shows
 Calling HANDSET X. The called handset rings and its
 screen shows HANDSET X is calling.

Calling base

HANDSET is calling

-OR-

Enter **0** to intercom with the telephone base. The screen shows **CALLING BASE**. The telephone base rings and its screen shows **HANDSET X** is calling.

2. To answer the intercom call, press **\PHONE/FLASH**, **INT**, **■)/SPEAKER** or any dial pad keys (**0-9**, **TONE X**, **#**) on the called handset. Both handsets now show **Intercom**. **-OR-**



Press **SPEAKER ●**), **INTERCOM** or any dial pad keys (**0-9**, **TONE X**, **#**) on the telephone base, or lift the corded handset to answer the intercom call.

 To end the intercom call, one party presses OFF/CLEAR or INT on either handset, or places the handset back in the charger. The other party hears four beeps. Both handsets display Intercom ended.



-OR-

Press **INTERCOM** or **CANCEL** on the telephone base if you are using speakerphone mode, or return the corded handset to the telephone base. The other party hears four beeps. **Intercom ended** appears on both handset screen and telephone base screen.






 Before the intercom call is answered, you can cancel it by pressing OFF/clear or INT on the calling handset.

Intercom

- 2. If the called handset is not answered within 100 seconds, or if it is in the directory or call log mode, or is on a call, or is out of range, the calling handset shows **Unable to call. Try again**.
- Pressing OFF/CLEAR or MUTE/DELETE on the cordless handset temporarily silences the intercom ringer.
- 4. You can only use one pair of handsets to make intercom calls at a time.

Using the telephone base:

- Press INTERCOM on the telephone base, INTERCOM TO: appears on the screen.
- Enter a handset number. The screen shows
 Calling HANDSET X. If you have a single handset
 system, the base displays Calling HANDSET. The
 called handset rings and its screen shows
 Base is calling.

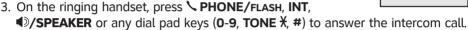



Calling

HANDSET X



- 1. If you press **INTERCOM** when there is no cordless handset registered to the telephone base, **Int requires two handsets** displays on the base screen.
- Before the intercom call is answered, you can cancel it by pressing CANCEL or INTERCOM on the telephone base.
- 3. If the called handset is not answered within 100 seconds, or if it is in the directory or call log mode, or is on a call, or is out of range, the base shows **Unable to call. Try again**.
- 4. Pressing CANCEL or MUTE on the telephone base temporarily silences the intercom ringer.
- 4. To end the intercom call, press **INTERCOM** or **CANCEL** on the telephone base if you are using speakerphone mode, or return the corded handset to the telephone base. The other party hears four beeps. **Intercom ended** appears on both handset screen and telephone base screen.



Answer an incoming call during an intercom call

If you receive an incoming outside call during an intercom call, there is a two-beep call waiting tone.

Using a cordless handset:

- To answer the call, press \ PHONE/FLASH. The intercom call ends automatically. Other system handsets can also answer the incoming call by pressing \ PHONE/FLASH.
- To end the intercom call without answering or canceling the incoming call, press OFF/CLEAR.

Using the telephone base:

Press **SPEAKER** ■ or lift the corded handset to answer the incoming call. The intercom call ends automatically.

40

Call transfer using intercom

Use the intercom feature to transfer an outside call to the telephone base or a cordless system handset.

Using a cordless handset:

- 1. During a call, press INT.
 - If you have a single handset system, the outside call is put on hold and your handset screen shows
 Calling base. The telephone base rings and its screen shows HANDSET is calling.
 - If you have more than one handset, your screen shows INTERCOM TO:. Use the dial pad keys to enter a handset number. The outside call is put on hold and your handset screen shows Calling HANDSET X. The other handset rings and its screen shows HANDSET X is calling.
 OR-

Enter **0** to transfer to the telephone base. The screen shows **Calling base**. The telephone base rings and its screen shows **HANDSET X is calling**.

2. To answer the call on the other handset, press

➤ PHONE/FLASH, INT, ♠ SPEAKER, or any dial pad
keys (0-9, TONE * or #). The outside call is still on
hold and both handsets now show Intercom. You can
now talk without the outside caller hearing the conversation.

-OR-

Press **INTERCOM** or **SPEAKER** ● on the telephone base or any dial pad keys (**0-9**, **TONE** ★ or #), or lift the corded handset to answer the intercom call. You can now talk without the outside caller hearing the conversation.



- 1. To cancel the transfer and return to the external call before the intercom call is answered, press **OFF/CLEAR**, **PHONE/FLASH** or **INT** on your handset.
- If the other handset does not answer the intercom call within 100 seconds, or if the other handset is in the directory or call log mode, or is out of range, the calling handset shows Unable to call. Try again and automatically returns to the external call.
- 3. From this intercom call, you have the following options:
 - You can transfer the call. Press MENU/SELECT twice to highlight Transfer on the calling handset. Your screen shows Call transferred. The other handset automatically connects to the outside call.
 - You can let the other handset join you on the outside call in a three-way conversation. Press MENU/SELECT.
 Press ▼CID or ▲DIR to highlight Share call on the calling handset, then press MENU/SELECT.













Call transfer using intercom

 You can press INT on your handset to alternate between the outside call (Outside call appears on the screen) and the intercom call (Intercom appears on the screen).



You can end the intercom call and continue the outside
 call with your originating handset. Press \ PHONE/FLASH
 on your handset (the ended intercom call party hears four beeps), or the

other person can press / OFF/clear on the other system handset.

Using the telephone base:

- 1. During a call, press INTERCOM.
 - If you have a single handset system, the telephone base screen shows
 Calling HANDSET. The handset screen shows Base is calling.
 - If you have more than one handset, the telephone base screen shows INTERCOM TO:. Use the dial pad keys to enter a handset number. The telephone base screen then shows Calling HANDSET X. The handset screen shows Base is calling.
- 2. To answer the call on the handset, press \ PHONE/FLASH, INT,
 ¶೨/SPEAKER, or any dial pad keys (0-9, TONE X or #). The outside call is still on hold and both base and handset now show Intercom. You can now talk without the outside caller hearing the conversation.
- 3. From this intercom call, you have the following options:
 - You can transfer the call. Press MENU/SELECT twice to highlight Transfer on the telephone base.
 Your screen shows Call transferred. The handset automatically connects to the outside call.
- >Transfer Share call
- You can let the handset join you on the outside call in a three-way conversation. Press MENU/SELECT.
 Press ▼/CID or ▲/DIR to highlight Share call, then press MENU/SELECT.
- Call traneferred 3:54_m 11/30
- You can press INTERCOM on the telephone base to alternate between the outside call (Outside call appears on the screen) and the intercom call (Intercom appears on the screen).
 Press to alternate.
- Outside call 4:20_{pm} 11/30
- You can end the intercom call and continue the outside call on the telephone base. Press CANCEL on the telephone base (the ended intercom call party hears four beeps), or the person at the handset can press OFF/CLEAR.

About the directory

Shared directory

The directory is shared by the telephone base and all handsets. Changes made to the directory from any system handset or the base apply to all.



NOTE: Only one person can review the directory at a time. If another person tries to enter the directory, the screen shows **Not available at this time**.



Robert Brown 888-883-2445

Capacity

The directory can store up to 50 entries, with a maximum of 15 alphanumeric characters (including spaces) for names and 30 digits for telephone numbers. A convenient search feature can help you find and dial numbers quickly (page 49).

If there are already 50 entries, the screen shows **Directory full**. You cannot store a new number until you delete one.

To create a new directory entry

Using a cordless handset:

- 1. Press MENU/SELECT in idle mode to enter the main menu.
- 2. Press ▼CID or ▲DIR to scroll to >Directory, then press MENU/SELECT.
- 3. Press ▼CID or ▲DIR to select >Add contact.
- 4. Press MENU/SELECT.
- 5. Enter the telephone number when prompted.
 - Use the dial pad keys to enter up to 30 digits.
 - Press ▼CID or ▲DIR to move the cursor to the left or right.
 - Press **MUTE/DELETE** to erase a digit.
 - Press and hold MUTE/DELETE to erase all digits.
 - Press and hold REDIAL/PAUSE to enter a three-second dialing pause (a p appears).
 - Copy a number from the redial list by pressing REDIAL/PAUSE then
 ▼CID or ▲DIR, or pressing REDIAL/PAUSE repeatedly to locate the number to copy. Press MENU/SELECT to copy the number.
- 6. Press MENU/SELECT to save the number in the display.

The display shows **Already saved** if the number is already in the directory. You cannot save the same number twice.

- 7. Enter the name when prompted.
 - Use the dial pad keys to enter a name (up to 15 characters). Each time you press a key, the character on that key appears. Additional key presses produce other characters on that key. See the chart on the next page.
 - Press ▼CID or ▲DIR to move the cursor to the left or right.
 - Press 0 to add a space.
 - Press MUTE/DELETE to erase a letter.
 - Press and hold **MUTE/DELETE** to erase all letters.







- 1. The first letter of every word is a capital letter. The remaining letters in a word start as lowercase letters as shown in the chart on the next page.
- 2. You cannot store a new number to a full directory until you delete one. The screen shows **Directory full**.

REVIEW >Add contact

ENTER NUMBER

888-883-2445

Ê

Diel ken	Characters by number of key presses										
Dial key	1	2	3	4	5	6	7	8	9	10	11
1	1		-	,	()	*	#	&	/	,
2	А	В	С	а	b	С	2				
3	D	Е	F	d	е	f	3				
4	G	Н	I	g	h	i	4				
5	J	K	L	j	k	l	5				
6	М	N	0	m	n	0	6				
7	Р	Q	R	S	р	q	r	s	7		
8	Т	U	٧	t	u	V	8				
9	W	Х	Υ	Z	w	Х	у	Z	9		
0	space	0									
*											
#											

8. Press **MENU/SELECT** to store your new directory entry. There is a confirmation tone. The name and the telephone number appear. To change them later, see page 50.

Robert Brown 888-883-2445

Using the telephone base:

- 1. Press MENU/SELECT in idle mode to enter the main menu.
- Press ▼/CID or ▲/DIR to scroll to >Directory, then press MENU/SELECT.
- 3. Press **▼/CID** or **▲/DIR** to highlight **Add contact**.
- 4. Press MENU/SELECT.
- 5. Enter the telephone number when prompted.
 - Use the dial pad to enter up to 30 digits.
 - Press ▼/CID or ▲/DIR to move the cursor to the left or right.
 - Press **X/DELETE** to erase a digit.
 - Press and hold X/DELETE to erase all digits.
 - Press and hold REDIAL/PAUSE to enter a three-second dialing pause (a p appears).
 - Copy a number from the redial list by pressing REDIAL/PAUSE then
 ▼/CID or ▲/DIR, or pressing REDIAL/PAUSE repeatedly to locate the number to copy. Press MENU/SELECT to copy the number.

nu.

>Directory

Call log

Review >Add contact

ENTER NUMBER 883-883-2445_

6. Press **MENU/SELECT** to save the number in the display.

The display shows **Already saved** if the number is already in the directory. You cannot save the same number twice.

- 7. Enter the name when prompted.
 - Use the dial pad to enter a name (up to 15 characters). Each time you press a key, the character on that key appears. Additional key presses produce other characters on that key. See the chart below.
 - Press ▼/CID or ▲/DIR to move the cursor to the left or right.
 - Press X/DELETE to erase a letter.
 - Press and hold **X/DELETE** to erase all letters.

Dial key	Characters by number of key presses										
Dial key	1	2	3	4	5	6	7	8	9	10	11
1	1		-	,	()	*	#	&	/	,
2	Α	В	С	а	b	С	2				
3	D	Е	F	d	е	f	3				
4	G	Н	I	g	h	i	4				
5	J	K	L	j	k	l	5				
6	М	N	0	m	n	0	6				
7	Р	Q	R	S	р	q	r	S	7		
8	Т	U	٧	t	u	V	8				
9	W	Х	Υ	Z	W	Х	у	Z	9		
0	space	0									
*											
#											

 Press MENU/SELECT to store your new directory entry. There is a confirmation tone. The name and the telephone number appear. To change them later, see page 51. Robert Brown 888-883-2445

To add a predialed telephone number to the directory

You can save a predialed telephone number to the directory.

Using a cordless handset:

- 1. Enter the telephone number in idle mode.
 - Use the dial pad keys to enter up to 30 digits.
- 2. Press **MENU/select** to edit the number.
 - Press ▼CID or ▲DIR to move the cursor to the left or right.
 - Press **MUTE/DELETE** to erase a digit.
 - Press and hold MUTE/DELETE to erase all digits.
 - Press and hold REDIAL/PAUSE to enter a three-second dialing pause (a p appears).
 - Copy a number from the redial list by pressing REDIAL/PAUSE then
 ▼CID or ▲DIR, or pressing REDIAL/PAUSE repeatedly to locate the number to copy. Press MENU/SELECT to copy the number.
- 3. Press **MENU/select** again to edit the name (see **To edit an entry** on pages 50-51).
- Press MENU/SELECT to save the number to the directory. There is a confirmation tone.

Using the telephone base:

- 1. Enter the telephone number in idle mode.
 - Use the dial pad keys to enter up to 30 digits.
- 2. Press **MENU/select** to edit the number.
 - Press ▼/CID or ▲/DIR to move the cursor to the left or right.
 - Press X/DELETE to erase a digit.
 - Press and hold X/DELETE to erase all digits.
 - Press and hold REDIAL/PAUSE to enter a three-second dialing pause (a p appears).
 - Copy a number from the redial list by pressing REDIAL/PAUSE then
 ▼/CID or ▲/DIR, or pressing REDIAL/PAUSE repeatedly to locate the number to copy. Press MENU/SELECT to copy the number.
- Press MENU/SELECT again to edit the name (see To edit an entry on pages 50-51).
- 4. Press **MENU/SELECT** to save the number to the directory. There is a confirmation tone.

To review directory entries

Using a cordless handset or telephone base:

- Press DIR▲ on a cordless handset or press ▲/DIR on the telephone base when in idle mode to show the first entry in the directory. Directory empty appears if there are no directory entries.
 OR-
 - Press **MENU/SELECT** when in idle mode, then press **▼CID** or **△DIR** on a cordless handset, or press **▼/CID** or **△/DIR** on the telephone base to scroll to **>Directory**. Press **MENU/SELECT** twice.
- 2. Press ▼CID or ▲DIR on a cordless handset, or press ▼/CID or ▲/DIR on the telephone base to browse through the directory. Entries appear alphabetically by the first letter in the name.
- NOTE: If the telephone number in the directory exceeds 15 digits, <* appears in front of the telephone number. Press **TONE** *X to move towards the end of the telephone number or press # (pound key) to move towards the beginning of the telephone number.

To search by name

Follow the steps below to search for directory entries on a cordless handset or the telephone base.

- Press DIR▲ on a cordless handset or press ▲/DIR on the telephone base when in idle mode to show the first listing in the directory. Directory empty appears if there are no directory entries.
- 2. When an entry appears, press the dial pad keys (2-9) to start a name search. The directory shows the first name beginning with the first letter associated with the dial pad key if there is an entry in the directory beginning with that letter. Press ▼CID or ▲DIR on a cordless handset, or press ▼/CID or ▲/DIR on the telephone base to scroll through the directory.
- 3. To see other names starting with the letters on the same dial pad key, keep pressing the key. The names appear in alphabetical order.

For example, if you have the names **Jennifer**, **Jessie**, **Kevin** and **Linda** in your directory:

- If you press **5** (JKL) once, you see **Jennifer**. If you press **▼CID** on a cordless handset or press **▼/CID** on the telephone base and you see **Jessie**.
- If you press 5 (JKL) twice, you see Kevin.
- If you press 5 (JKL) three times, you see Linda.
- If you press 5 (JKL) four times, you see 5 and then the first directory entry under 6 (MNO).
- If you press 5 (JKL) five times, you see Jennifer again.



- 1. If there is no name matching the first letter of the key you press, the directory shows a name matching the following letters of the key.
- 2. If you press a key (2-9) and no name starts with the letters on that key, the directory shows the entry matching the next letter in the directory.

To dial, delete or edit entries

To dial, delete or edit a directory entry (name and number), the entry must be displayed on the cordless handset or the telephone base screen. Use the directory review or search to show an entry.

Display dial

To dial a displayed number from the directory:

- Press \ PHONE/FLASH or \ D/SPEAKER on a cordless handset.
 OR-
- Press **SPEAKER ⑤** on the telephone base, or lift the corded handset.

To delete an entry

To delete a displayed directory entry on a cordless handset, press MUTE/DELETE then press MENU/SELECT. To delete a displayed directory entry at the telephone base, press X/DELETE then press MENU/SELECT. You cannot retrieve a deleted entry.

Robert Brown Delete contact?

Robert Brown Delete contact?

To edit an entry

When a directory entry is displayed:

Using a cordless handset:

- 1. To edit an entry, press MENU/SELECT, then ▼CID or ▲DIR to highlight Number, then press MENU/SELECT again.
 - Press the dial pad keys to add digits.
 - Press ▼CID or ▲DIR to move the cursor to the left or right.
 - Press mute/DELETE to erase a digit.
 - Press and hold MUTE/DELETE to erase all digits.
 - <u>Press and hold</u> <u>REDIAL/PAUSE</u> to add a three-second pause, if desired.
- 2. Press **MENU/SELECT** to save the setting. There is a confirmation tone. The updated directory entry appears.
- 3. To edit the name, press **▼CID** or **△DIR** to highlight **Name** and press **MENU/SELECT**.
 - Press the dial pad keys to add characters (page 45).
 - Press ▼CID or ▲DIR to move the cursor to the left or right.

Linda Miller 888-490-2005 ∰

EDIT CONTACT >>>umber



EDIT CONTACT Wane

To dial, delete or edit entries

- Press MUTE/DELETE to erase a letter.
- Press and hold MUTE/DELETE to erase all letters.
- 4. Press MENU/SELECT to confirm. There is a confirmation tone.



Robert Brown

888-883-2445

Using the telephone base:

- 1. To edit an entry, press MENU/SELECT, then ▼/CID or ▲/DIR to highlight Number, then press MENU/SELECT again.
 - Press the dial pad keys to add digits.
 - Press ▼/CID or ▲/DIR to move the cursor to the left or right.
 - Press X/DELETE to erase a digit.
 - Press and hold **X/DELETE** to erase all digits.
 - Press and hold REDIAL/PAUSE to add a three-second pause, if desired.
- 2. Press MENU/SELECT to save the setting. There is a confirmation tone. The updated directory entry appears.
- 3. To edit the name, press **▼/CID** or **▲/DIR** to highlight Name and press MENU/SELECT.
 - Press the dial pad keys to add characters (page 46).
 - Press ▼/CID or ▲/DIR to move the cursor to the left or right.
 - Press X/DELETE to erase a letter.
 - Press and hold X/DELETE to erase all letters.

4. Press MENU/SELECT to confirm. There is a confirmation tone.



Ĥ

EDIT NUMBER 888-883-2445

FOTT NAME Robert Brown

About caller ID

This product supports caller ID services offered by most telephone service providers. Caller ID allows you to see the name, number, date and time of calls. The available caller ID information will appear after the first or second ring.

Information about caller ID with call waiting

Caller ID with call waiting lets you see the name and telephone number of the caller before answering the call, even while on another call.

It might be necessary to change your telephone service to use this feature. Contact your telephone service provider if:

- You have both caller ID and call waiting, but as separate services (you might need to combine these services).
- You have only caller ID service, or only call waiting service.
- You don't subscribe to caller ID or call waiting services.

There are fees for caller ID services. In addition, services may not be available in all areas.

This product can provide information only if both you and the caller are in areas offering caller ID service and if both telephone service providers use compatible equipment. The time and date, along with the call information, are from the telephone service provider.

Caller ID information might not be available for every incoming call. Callers may intentionally block their names and/or telephone numbers. To view call log entries with numbers between 16 and 24 digits, you must save the entry to the directory (see

between 16 and 24 digits, you must save the entry to the directory (see page 56)



NOTE: You can use this product with regular caller ID service, or you can use this product's other features without subscribing to caller ID or combined caller ID with call waiting service.





Caller ID history

How the caller ID history (call log) works

The telephone stores caller ID information about the last 50 incoming calls in the telephone base. Entries are stored in reverse chronological order. The phone deletes the oldest entry when the log is full to make room for new calls. This information is common to all handsets and the base, so changes made using any handset or the telephone base are reflected in all. If you answer a call before the information appears on the screen, it does not show in the caller ID history.



NOTE: Each entry may have up to 24 digits for the phone number and 15 characters for the name.

Missed (new) calls indicator

When a cordless handset or the telephone base is in idle mode and has new or missed calls, the screen shows **XX Missed call(s)**.

All new or missed entries are counted as missed calls. Each time you review a call log entry on a cordless handset with the icon **NEW**, or review a call log entry on the telephone base with the icon **NEW**, the number of missed calls decreases by one.

If you do not want to review the missed calls one by one, but you still want to keep them in the caller ID history, when the cordless handset or the telephone base is idle, you can <u>press and hold</u> of off/CLEAR for four seconds on a cordless handset, or <u>press and hold</u> CANCEL for four seconds on the telephone base. All the entries in the caller ID history become old (have been reviewed), and the missed calls message goes away.









Memory match

If the incoming telephone number matches the last seven digits of a telephone number in your directory, the name that appears on the screen matches the corresponding name in your directory.

For example, if Christine Smith calls, her name appears as **Chris** if this is how you entered it into your directory.



NOTE: The number shown in the call log will be in the format sent by the telephone service provider. The telephone service

provider usually delivers 10-digit phone numbers (area code plus telephone number). If the telephone number of the caller does not match a number in your directory, the name will appear as it is delivered by the telephone service provider.





To review the caller ID history

Review the caller ID history to find out who called, to return the call, or to copy the caller's name and number into your directory. **Call log empty** appears if there are no records in the call log.

Using a cordless handset:

- 1. When a handset is in idle mode, press ▼CID to review the caller ID history in reverse chronological order starting with the most recent call.
 - -OR-

Review the caller ID history by pressing MENU/SELECT, then press ▼CID or ▲DIR to scroll to >Call log. Press MENU/SELECT twice to select >Review.

- 2. Press **▼CID** or **DIR**▲ to scroll through the list.
- 3. Press OFF/CLEAR to exit the caller ID history.

You hear a double beep when the list reaches the beginning or end of the call log.

Directory >Call log

6 MISSED CALLS

10:01⁸¹ 10/15



Using the telephone base:

- When the telephone base is in idle mode, press ▼/CID
 to review the caller ID history starting with the most
 recent call.
 - -OR-


Review the caller ID history by pressing MENU/SELECT, then press ▼/CID or ▲/DIR to scroll to >Call log, then press MENU/SELECT twice to select >Review.

- 2. Press ∇ /CID or \triangle /DIR to scroll through the list.
- 3. Press CANCEL to exit the caller ID history.

You hear a double beep when the list reaches the beginning or end of the call log.






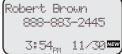



NOTE: Only one handset or the base can review the caller ID history at a time. If another handset tries to enter the directory or caller ID history, it shows **Not available at this time**.

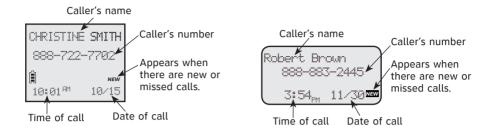

Cordless handset screen display

Telephone base screen display

View dialing options

Although the incoming call log entries have 10 digits (the area code plus the seven-digit number), in some areas, you might need to dial only the seven digits, 1 plus the seven digits, or 1 plus the area code plus the seven digits. You can change and store the number of digits that you dial in the call log.

While reviewing the call log, press # (pound key) repeatedly to show different dialing options for local and long distance numbers before dialing or saving

the telephone number in the directory.

Press 1 repeatedly if you need to add or remove 1 in front of the telephone number before dialing or saving it in the directory.

When the number is in the correct format for dialing, press \ PHONE/FLASH or ♠ SPEAKER on a cordless handset or press SPEAKER ♠ or lift the corded handset on the telephone base to call the number.

883-2445 1-883-2445 888-883-2445 1-888-883-2445 1-883-2445 1-883-2445 1-888-883-2445 1-888-883-2445

To save the number to the directory, see **Save a call log entry to the directory** on the next page.

Dial a call log entry

To dial a call log entry when in the call log:

Using a cordless handset:

- 1. Press **▼CID** or **DIR** to browse.
- 2. Press \ PHONE/FLASH or ♠ SPEAKER to dial the entry.

Using the telephone base:

- 1. Press **▼/CID** or **▲/DIR** to browse.
- 2. Press **SPEAKER ♦** or lift the corded handset to dial the entry.

Delete entries

Using a cordless handset or the telephone base:

- Press MUTE/DELETE on the cordless handset or X/DELETE on the telephone base to delete the displayed entry from the caller ID history.
- Follow the steps below to delete all call log entries.
 - 1. Press **MENU/select** when in idle mode.
 - Press ▼CID or ▲DIR on a cordless handset, or press ▼/CID or ▲/DIR on the telephone base to scroll to >Call log, then press MENU/SELECT.
 - Press ▼CID or ▲DIR on a cordless handset, or press ▼/CID or ▲/DIR on the telephone base to scroll to >Del all calls, then press MENU/SELECT.
 - 4. When the screen shows **Delete all calls?** press **MENU/SELECT** to clear the caller ID history of all entries. There is a confirmation tone. Press **OFF/CLEAR** on the cordless handset or **CANCEL** on the telephone base to exit without deleting any entries.





Save a call log entry to the directory

Using a cordless handset or the telephone base:

- When in the call log, Press ▼CID or ▲DIR on a cordless handset, or press ▼/CID or ▲/DIR on the telephone base to browse.
- 2. Press MENU/SELECT to choose an entry. The screen displays EDIT NUMBER.
- 3. Use the dial pad keys to edit the number.
 - Press ▼CID or ▲DIR on a cordless handset, or press ▼/CID or ▲/DIR
 on the telephone base to move the cursor to the left or right.
 - Press MUTE/DELETE on the cordless handset or X/DELETE on the telephone base to backspace and erase a digit.

- Press and hold MUTE/DELETE on the cordless handset or X/DELETE on the telephone base to erase the entire entry.
- <u>Press and hold</u> **REDIAL/PAUSE** to insert a three-second dialing pause (a **p** appears).
- 4. Press MENU/SELECT to move to the name. The screen displays EDIT NAME.
 - Use the dial pad keys (see page 45) to add characters.
 - Press ▼CID or ▲DIR on a cordless handset, or press ▼/CID or ▲/DIR
 on the telephone base to move the cursor to the left and right.
 - Press MUTE/DELETE on the cordless handset or X/DELETE on the telephone base to erase a letter.
 - Press and hold MUTE/DELETE on the cordless handset or X/DELETE on the telephone base to erase all letters.
- 5. Press MENU/SELECT when done and the screen shows Saved.
 - If the entry is already saved in the directory, Already saved displays.
- **NOTE:** You might need to change how a caller ID number is dialed if the entry does not appear in the correct format. Caller ID numbers might appear with an area code that might not be necessary for local calls, or without a 1 that might be necessary for long distance calls (see **View dialing options** on page 55).

Reasons for missing caller ID information

There are occasions when other information or no information shows for various reasons:

On-screen message	Reason
PRIVATE NUMBER	The caller prefers not to show the phone number.
PRIVATE NAME	The caller prefers not to show the name.
PRIVATE CALLER	The caller prefers not to show the phone number and name.
UNKNOWN NUMBER	Your telephone service provider cannot determine the caller's number.
UNKNOWN NAME	Your telephone service provider cannot determine the caller's name.
UNKNOWN CALLER	Your telephone service provider cannot determine the caller's name and telephone number. Calls from other countries may also generate this message.

About the answering system

Answering system and voicemail

Your telephone has separate indicators for two different types of voice messages: those left on its built-in digital answering system and those left with your telephone service provider's voicemail (fees may apply). Your telephone's built-in digital answering system messages and voicemail messages are separate. Each alerts you to new messages differently.



BASE New voicemail 01 10:21™ ► 10/15

If \blacksquare and New voicemail display on the handset and the telephone base, your telephone service provider is

indicating that it has new voicemail for you. To listen to your voicemail, you typically dial an access number provided by your telephone service provider, followed by a security code or PIN.

Some telephone service providers bundle or combine multiple services like voicemail and call waiting, so you may not be aware that you have voicemail. To check what services you have and how to access them, contact your telephone service provider.

To use your voicemail service rather than your answering system, turn off your answering system. To use your answering system rather than your voicemail service, contact your telephone service provider to deactivate your voicemail service. You can also use your telephone answering system and voicemail together by setting your built-in answering system to answer before voicemail answers as described below. To learn how to program your voicemail settings, contact your telephone service provider. Then, if you are on a call, or if the answering system is busy recording a message and you receive another call, the second caller can leave a voicemail message.

Set your answering system to answer calls at least two rings earlier than your voicemail is set to answer. For example, if your voicemail answers after six rings, set your answering system to answer after four rings. Some voicemail providers may program the delay before answering calls in seconds instead of rings. In this case, allow six seconds per ring when determining the appropriate setting.

Answering system new message indication

The handset screen shows **QQ**, **XX New message(s)** and the ▶/■/PLAY/stoP indicator on the telephone base flashes when there are new answering system messages. To listen to the messages, press **MENU/SELECT** twice on the handset or press ▶/■/PLAY/stoP on the telephone base (page 62).







NOTE: After reviewing new message(s), the number of old message(s) appears on the message window.

About the answering system


Turn the answering system on or off at the telephone base

Unless you change it, the answering system is on and ready to record messages. You can turn the answering system off, but if you do so, the answering system does not answer calls and record incoming messages.

Press **b/ANSWER ON** to turn the answering system on or off. If the answering system is turned on, **Calls will be answered** displays and the system announces "Calls will be answered." If the answering system is turned off, **Calls will not be answered** displays and the system announces "Calls will not be answered."



Calls will be answered

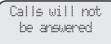

Message capacity

The answering system can record up to 99 messages, depending on the length of each message. Individual messages can be up to four minutes, and the maximum recording time is approximately 14 minutes. The actual recording time depends on individual message characteristics. Messages remain available for replay until you delete them.

If the answering system has three minutes of recording time left, it announces, "Less than three minutes to record," before message playback. If the answering system has no time left, it announces, "Memory is full," before message playback.

If you attempt to turn on the answering system but the memory is low, **Less than 3 min to record** displays on the cordless handset and telephone base screens.

If you attempt to turn on the answering system but the memory is full, **Memory full** displays on the cordless handset and telephone base screens. The base also announces, "Memory is full," then "Calls will not be answered." The message counter displays the number of messages.

Voice prompts

The system provides voice prompts for message playback, recording outgoing announcements and during remote access.

About the answering system

Call screening at the telephone base

If the answering system and call screening are on, the announcement and the incoming message are audible at the telephone base when a call arrives.

You can turn call screening on or off using a cordless handset (see page 21) or using the telephone base. When call screening is off, you can temporarily turn on call screening by pressing ▶/■/PLAY/STOP on the telephone base. Call screening will be off for the next incoming call.

If call screening is on and you want to silence the telephone base while it is recording messages, press \rightarrow /\pi/PLAY/STOP on the telephone base. Call screening will be on for the next call.

Call intercept

While screening a call, you can stop recording and speak to the caller by pressing \ PHONE/FLASH or \]/SPEAKER on a cordless handset, or pressing SPEAKER \] or lifting the corded handset on the telephone base.

Base ringer

Press ▲▼/VOLUME on the telephone base to adjust the ringer volume when the telephone is not in use.

You hear a sample of the ringer while adjusting the volume. The telephone base screen shows **Ringer off** and \mathfrak{A} when the ringer is off.



Temporarily turn off the message alert tone

If the new message alert tone is turned on (see page 23), the telephone base beeps every 10 seconds when there are new or missed messages. Pressing any telephone base key temporarily silences the message alert tone.

If you press **X/DELETE** when in idle mode to temporarily turn off the message alert tone, there is a voice prompt directing you to press **X/DELETE** again to delete all old messages. The message alert tone is temporarily turned off. Only press **X/DELETE** a second time if you wish to erase all old messages in the answering system.

The message alert tone resumes when you receive another message.

Message playback

If you have new messages, \rightarrow/\boxed/PLAY/STOP on the telephone base flashes and only the new messages are played (oldest first). If there are no new messages, the system plays back all the messages (oldest first).

When playback begins, the total number of messages is announced. Before each message, you hear the day and time of the recording. If the date and time are not set, you hear, "Time and date not set," before playback. After the last message, you hear, "End of messages." If the recording time is less than three minutes, you hear, "Less than three minutes to record," (see Message capacity on page 60).

To listen to messages at the telephone base:

When the telephone base is in idle mode, press ►/■/PLAY/STOP.

-OR-

Press **MENU/SELECT** twice. If there are only new or old messages, the messages will play automatically. If there are new and old messages, press **▼/CID** or **▲/DIR** to highlight **Play new msgs** or **Play old msgs** and press **MENU/SELECT**.

To listen to messages on a cordless handset:

- 1. When the handset is in idle mode, press **MENU/SELECT** to enter the main menu.
- 2. Press MENU/SELECT again to select >Play messages.
- 3. If there are only new or old messages, they will play automatically. If there are new and old messages, press ▼CID or ▲DIR to select >Play new msgs or >Play old msgs, then press MENU/SELECT. If there are only new messages, they will play automatically.



PLAVING MESSAGE

10:21m

M=G#[1/2]

10/15

The system announces the number of messages, then begins playback. The message sequence is shown on the cordless handset screen or the telephone base screen. If there are no recorded messages, the cordless handset or the telephone base screen shows **No message** and you hear, "You have no messages."

Options during playback

When a message is playing, you can adjust the playback volume, skip, repeat or delete the message.

When messages are playing on the telephone base:

- Press ▲▼/VOLUME to adjust the message playback volume.
- Press **▶/SKIP** to skip to the next message.
- Press **«/REPEAT** to repeat the message. Press twice to hear the previous message.

Message playback

- Press X/DELETE to delete the message.
- Press **//PLAY/STOP** to stop the playback.

When messages are playing on the cordless handset:

- Press ▼CID/-VOLUME or ▲DIR/VOLUME+ to adjust the message playback volume.
- Press EQ to adjust the message playback audio quality.
- Press 6 to skip to the next message.
- Press 4 to repeat the message. Press twice to hear the previous message.
- Press 3 to delete the message.
- Press 5 to stop the playback.
- Press ◆)/SPEAKER to switch between speakerphone mode and handset mode.



NOTE: The equalizer stays on the same settings until you change it by pressing EQ III.

To delete all old messages

You can only delete old (reviewed) messages. You cannot delete new messages until you review them. You cannot retrieve deleted messages.

To delete all old messages on the telephone base:

1. When the telephone is idle, press **X/DELETE**. The system announces, "To delete all old messages, press **DELETE** again." The screen displays **Delete** all old messages?

2. Press X/DELETE again. The system announces, "All old messages deleted."

To delete all old messages on a cordless handset:

- 1. Press MENU/SELECT when in idle mode to enter the main menu.
- 2. Press **▼CID** or **▲DIR** to scroll to **>Answering sys**. Press MENU/SELECT.
- 3. Press ▼CID or ▲DIR to highlight Delete all old, then press MENU/SELECT. The screen shows Delete all old messages?
- 4. Press MENU/SELECT again to confirm. The screen displays **Deleting...** then **All old msgs deleted!** There is a confirmation tone.

Announcement Xelete all old Ĥ

Delete all old messages?

Ê

Deleting...

Â

All old megs deleted!

Ĥ

Recording and playing memos

Memos are messages you record at a cordless handset or the telephone base. You can record, playback, and delete them like incoming messages. You can record a memo as a reminder to yourself, or leave a message for others who use the answering system.

To record a memo

Using a cordless handset:

- When the handset is in idle mode, press MENU/SELECT to enter the main menu.
- Press ▼CID or ▲DIR to scroll to >Answering sys. Press MENU/SELECT.
- Press ▼CID or ▲DIR to highlight Record memo, then press MENU/SELECT. The system announces, "Record after the tone. Press 5 when you are done." You can record a memo for up to four minutes.
- 4. Speak facing the handset to record a memo.
- Press 5 to stop recording. The system announces, "Recorded." The system does not save memos shorter than two seconds.

Play messages >Answering sys

Delete all old >Record memo

Record memo... 5-Stop



Using the telephone base:

- When the telephone is in idle mode, press MENU/SELECT to enter the main menu.
- Press ▼/CID or ▲/DIR to scroll to >Answering sys.
 Press MENU/SELECT.
- 3. Press ▼/CID or ▲/DIR to highlight Record memo, press MENU/SELECT. The system announces, "Record after the tone. Press 5 when you are done." You can record a memo for up to four minutes.
- 4. Speak facing the telephone base speakerphone to record a memo.
- 5. Press **5** to stop recording. The system announces, "Recorded." The system does not save memos shorter than two seconds.

Play messages >Answering sys

Delete all old >Record memo

Record memo... 5-Stop

To play back a memo

Play memos the same way as messages. See **Message playback** on page 62.

Base message counter displays

The base message counter shows the total number of answering system messages. See the table below for other message counter displays.



Message counter displays

Ø	No messages.
1-99	Total number of new and old messages and memos, or message number currently playing during message playback.
	If XX New message(s) displays on the screen at the same time, there are new messages or memos.
	If Rec mem full displays on the screen at the same time, the memory is full. You must delete some messages before recording new messages.
	The answering system is being accessed or programmed by a cordless handset, or someone is accessing it remotely.

Remote access

You can reach your answering system remotely by dialing your home telephone number from any touch-tone telephone.

To remotely reach your answering system:

- 1. Dial your telephone number from any touch-tone telephone.
- 2. When the system answers, enter the two digit remote access code (19 is the default code. See page 22 to change it).
 - The system automatically announces the number of messages (new and/or old) if there are any, and then begins to play them.
- 3. You can also enter the following remote commands.

Remote commands

•	Press to listen to all messages.
ABC 2	Press to listen to new messages only.
DEF 3	Press to delete the current message (during playback).
DEF 3 DEF 3	Press twice to delete all old messages while in remote standby mode.
GHI 4	Press to repeat the current message (during playback).
GH14 GH14	Press twice to listen to the previous message.
JKL 5	Press to stop any operation (including recording).
TORE X JKL 5	Press to listen to a list of remote commands.
MNO 6	Press to skip to the next message (during playback).
TONE X PORS 7	Press to record a new announcement.
TUV 8	Press to end remote access (the call will be terminated).
OPER ()	Press to turn the answering system on or off.

4. Hang up or press 8 to end the call and save all messages.

Cut out and carry the remote access wallet card at the back of this user's manual for quick reference.

Answering system

Remote access



NOTES:

- 1. If you do not enter a valid remote access code, the system answers the call as a normal incoming call.
- 2. If you pause for more than four seconds during remote access, you hear a help menu listing all features and commands. If you pause for another 20 seconds, the call disconnects.
- 3. If the memory is full, the answering system answers after 10 rings and announces, "Memory is full. Enter the remote access code." Enter your remote access code to access the messages and announcements.

Expansion handset

Your new AT&T CL84100/CL84200/CL84250/CL84300/CL84350 telephone system can accommodate up to 12 handsets. You can add new handsets (AT&T CL80100, available separately) to your telephone system, but must register each device with the telephone base before use (see page 69).

The handset with the CL84100 is named **HANDSET**. You can register up to 11 additional handsets to the telephone base, and they are assigned numbers in sequential order (**HANDSET 2**, **HANDSET 3**, **HANDSET 4** and so on).

The handsets that come with the CL84200 or CL84250 are **HANDSET 1** and **HANDSET 2**. You can register up to 10 additional handsets to the telephone base, and they are assigned numbers in sequential order (**HANDSET 3**, **HANDSET 4**, **HANDSET 5** and so on).

The handsets that come with the CL84300 or CL84350 are **HANDSET 1**, **HANDSET 2** and **HANDSET 3**. You can register up to nine additional handsets to the telephone base, and they are assigned numbers in sequential order (**HANDSET 4**, **HANDSET 5**, **HANDSET 6** and so on).

Adding and registering handsets

When first purchased, all expansion handsets alternately show **1.Press HS LOC on base 4sec** and

2.Then press # on handset on the screen. The new handset should be charged without interruption for at least 30 minutes before registering it to the telephone base.

To register a handset to your telephone base

- Make sure the handset is out of the charger and alternately shows 1.Press HS LOC on base 4sec and 2.Then press # on handset before you begin registration.
- 2. Press and hold **CLOCATOR** on the telephone base for about four seconds until the base screen shows **Registering handset...**, then release the button.
- 3. Press # (pound key) on the handset. The screen shows Registering... Please wait. It takes up to 60 seconds to complete registration. Then HANDSET X Registered appears on the screen, with X being the handset number (1-12), and the handset beeps. The handset is now registered with the telephone base.

If registration is not successful, the handset screen displays **Registration failed**. Please start again from step one above.



- 1. You cannot register a handset if any other system handset is in use.
- You cannot register more than 12 handsets to the telephone base. Registration slots are full shows on the base screen while you are doing step two above.







Registering handset...

> Registering... Please wait



HANDSET X Registered

Deregistering a handset

You can deregister handsets. You may need to deregister your handsets if:

· You have 12 registered handsets and need to replace a handset.

-OR-

 You wish to change the designated handset number of your registered handsets.

You must first deregister ALL the handsets, and then register each handset you wish to use again, one at a time.

Please read carefully through all the instructions on this page before beginning the deregistration process.

To deregister all handsets

 Press and hold FLOCATOR on the telephone base for about 10 seconds until the base screen shows Registering handset... followed by Deregister all handsets?, then release the LOCATOR button. The base screen shows the deregistration screen.





- 2. Immediately press MENU/SELECT.
- It takes up to 60 seconds to complete the deregistration process. Wait for the cordless handset screen to alternately display 1.Press HS LOC on base 4sec and
 2.Then press # on handset before registering the handset(s) again.
- 4. To register the handset(s) to the telephone base again, follow the registration instructions on the previous page.

After you deregister the handset(s), the telephone base is in idle mode but the system date and time information needs to be reset. For instructions, see **Set date/time** on page 27.



- 1. If the deregistration process is not successful, you might need to reset the system and try again. To reset, unplug the power from the telephone base and plug it back in.
- 2. You cannot deregister the handset(s) if any other system handset is in use.
- Even if the battery is depleted, you can still deregister the handset by following the steps above. After the handset is charged for at least 10 minutes, the screen shows
 Press HS LOC on base 4sec and 2.Then press # on handset.

Alert tones and lights

Handset screen icons

	Battery status - battery is charging (animated display).
	Battery status - low battery (flashing); place handset in charger to recharge.
■ 3)	Speakerphone - the speakerphone is in use.
\mathcal{D}	Ringer off - the handset ringer is off.
√ _M	New voicemail - you have new voicemail from your telephone service provider.
ANS ON	Answering system is on.
ထ	Message - new message in the built-in answering system.
NEW	New or missed calls.
MUTE	Microphone is off.
1/2	Message counter - number of message playing/total number of messages.



Handset alert tones

One short beep	Tone of each key press if key tone is turned on.
One long beep	Indication to begin recording a message, memo or announcement.
Two short beeps	You are pressing the ▼ciD/-VOLUME or ▲DIR/VOLUME+ keys when the volume is already at its highest or lowest settingOR- Call waiting toneOR- Error tone.
Three beeps	Out of range while the handset is on a call.
Confirmation tone (Three rising tones)	The system has completed the command successfully.
Four beeps	The other party has ended your intercom call.
Four short beeps	Low battery warning.

Telephone base icons

Ď	Ringer off - the handset ringer is off.
V M	New voicemail - you have new voicemail from your telephone service provider.
NEW	New or missed calls.
MsG —	Message counter - number of messages



Alert tones and lights

Telephone base tones

Beeps every 10 seconds	Message alert.
_	You are setting the ringer volume by pressing the ▲▼/VOLUME keys on the telephone base.

Lights



On when the mute function is on.



Handset and telephone base display screen messages

Screen display messages

Already saved	The telephone number you have entered is already in the directory.
BASE Check AC power	The telephone base is on a call while in line power mode.
Call log emety	There are no entries in caller ID history.
Call transferred	You have transferred an outside call to another cordless handset.
Calling base	The handset is calling the base (for intercom calls). The handset is transferring an outside call to the base.
Calling HANDSET (For systems with one handset)	The telephone base is calling the handset (for intercom calls). The telephone base is transferring an outside call to the handset.
Calling HANDSET X (For systems with two or more handsets)	The handset is calling another handset (for intercom calls). The handset is transferring an outside call to another handset.
Call answered	The answering system is answering a call.
Calls will be answered	The answering system is turned on and can answer calls.
Calls will not be answered	The answering system is turned off and cannot answer calls.
Contact deleted	A directory entry is deleted.
Directory empty	There are no directory entries.
Directory full	The directory is full. You cannot save any new entries unless you delete some current entries.
Ended	You have just ended a call.
HANDSET is calling (For systems with one handset)	The handset is calling the telephone base.
HANDSET X is calling (For systems with two or more handsets)	Another system handset is calling.
Incomin9 call	There is a call coming in.

Handset and telephone base display screen messages

Screen display messages

Int requires two handsets	There are no registered handsets for the telephone base to intercom.
Intercom	The handset is on an intercom call.
Intercom ended	The intercom call has just ended.
INTERCOM TO: (For systems with two or more handsets)	You have started the intercom process, and need to enter the number of the handset you wish to call.
Line in use	An extension phone, or one of the handsets is in use.
Low battery	You should charge the battery.
Microphone ON	Mute is off so the other party can hear your voice.
Muted	The microphone is off. The other party cannot hear you.
New voicemail	There are new voicemail messages from your telephone service provider.
No battery	The handset in the charger has no battery installed.
No line	There is no telephone line connection.
No si9nal, call ended	The handset is out of range while on a call.
Not available at this time	Someone else is using the directory or caller ID history.
Other handset is calling (For systems with two handsets)	The other handset is calling.
Out of ram9e OR No pwr at base	The telephone base has lost power, or the handset is out of range.
Outside call	You are on the external call during call transfer.
Paging	The cordless handset is paged by the telephone base.
Paging all handsets	The telephone base is paging the handset(s).
Phone	The handset is on a call.
Place in charger	The battery is very low. The handset should be charged.
1.Press H5 LOC on base 4sec	Screen display before handset registration.

Handset and telephone base display screen messages

Screen display messages

Rec mem full	The system recording time is full.
Rec mem low	The system recording time is low.
Recordin9 message	The answering system is recording a message.
Registering handset	The telephone base screen display when a handset is in the process of registering.
Registering Please wait	The handset screen display when it is registering to the telephone base.
Registration failed	The handset registration is not successful.
Registration slots are full	The system does not allow a 13 th handset to be registered to the telephone base.
Rin9er off	The ringer is off temporarily during an incoming call.
Saved	The entry in the caller ID history is saved in the directory.
Share call	You can share an outside call with another cordless handset.
Seeker	The handset speakerphone is in use.
Transfer to: (For systems with two or more handsets)	You have started transferring a call, and need to enter the desired handset number.
2.Then press # on handset	Screen display before handset registration.
Unable to call. Line in use	Failed phone call (the telephone line is in use).
Unable to call. Try again	Failed intercom or conference call (there are already two handsets being used).
XX Missed calls	There are new calls in the caller ID history.

If you have difficulty with your phone, please try the suggestions below. For Customer Service, visit our website at **www.telephones.att.com** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.

My telephone doesn't work at all.

- Make sure the power cord is securely plugged in.
- Make sure you plug the battery connector securely into the cordless handset.
- Make sure you plug the telephone line cord securely and firmly into the telephone base and the telephone wall jack.
- Charge the battery in the cordless handset for at least 16 hours. For optimum daily performance, return the cordless handset to the handset charger when not in use.
- If the battery is depleted, it might take approximately 30 minutes to charge the handset before it shows Low battery, see page 7 for details.
- Reset the telephone base. Unplug the electrical power. Wait for approximately 15 seconds, then plug it back in. Allow up to one minute for the cordless handset and telephone base to reset.
- You may need to purchase a new battery. Please refer to Battery installation and charging in this user's manual on pages 7-8.

I cannot get a dial tone.

- First try all the suggestions above.
- Move the cordless handset closer to the telephone base. You might have moved out of range.
- If the previous suggestions do not work, disconnect the telephone base from the telephone jack and connect to a different phone. If there is no dial tone on that phone either, the problem is in your wiring or telephone service. Contact your telephone service provider.
- Your line cord might be malfunctioning. Try installing a new line cord.

I cannot dial out.

- First try all the suggestions above.
- Make sure you have a dial tone before dialing. The cordless handset might take a second or two to find the telephone base and produce a dial tone.
 This is normal. Wait an extra second before dialing.
- Eliminate any background noise. Noise from a television, radio or other
 appliances might cause the phone to not dial out properly. If you cannot
 eliminate the background noise, first try muting the cordless handset
 before dialing, or dialing from another room with less background noise.
- If the other phones in your home are having the same problem, contact your telephone service provider (charges may apply).

My cordless handset isn't performing normally.

- Make sure you plug the power cord securely into the telephone base.
 Plug the power adapter into a different, working electrical outlet without a wall switch.
- Move the cordless handset closer to the telephone base. You might have moved out of range.
- Reset the telephone base. Unplug the electrical power. Wait for 15 seconds then plug it back in. Allow up to one minute for the cordless handset and telephone base to reset.
- Other electronic products such as HAM Radios and other DECT phones can cause interference with your cordless phone. Try installing your phone as far away as possible from these types of electronic devices.

Out of range OR No pwr at base appears on my cordless handset.

- Ensure you plug the telephone base in properly and the power is on.
- Place the cordless handset closer to the telephone base for synchronization.
- Move the cordless handset closer to the telephone base. You might have moved out of range.
- Reset the telephone base. Unplug the electrical power. Wait for 15 seconds then plug it back in. Allow up to one minute for the cordless handset and telephone base to reset.
- Other electronic products such as HAM Radios and other DECT phones can cause interference with your cordless phone. Try installing your phone as far away as possible from these types of electronic devices.

The batteries do not hold a charge.

- If the cordless handset is in the handset charger and the charge light is not on, refer to **The charge light is off or blinking** (page 79).
- Charge the battery in the cordless handset for at least 16 hours. For optimum daily performance, return the cordless handset to the charger when not in use.
- If the battery is depleted, it might take approximately 30 minutes to charge the handset before it shows **Low battery**, refer to the table on page 7 for details.
- You might need to purchase a new battery. Please refer to **Battery installation and charging** in this user's manual on pages 7-8.

I get noise, static, or weak signals even when I'm near the telephone base.

- If you subscribe to high-speed Internet service (DSL digital subscriber line) through your telephone line, you must install a DSL filter between the telephone line cord and the telephone wall jack (see page 5).
 The filter prevents noise and caller ID problems as a result of DSL interference. Please contact your DSL service provider for more information about DSL filters.
- You may be able to improve the performance of your cordless phone
 by installing your new telephone base as far as possible from any other
 existing cordless telephone system that may already be installed.
- Other electronic products such as HAM Radios and other DECT phones can cause interference with your cordless phone. Try installing your phone as far away as possible from these types of electronic devices.
- Do not install this phone near a microwave oven or on the same electrical outlet. You might experience decreased performance while the microwave oven is operating.
- If you plug your phone in with a modem or a surge protector, plug the phone (or modem/surge protector) into a different location. If this does not solve the problem, relocate your phone or modem farther apart from one another, or use a different surge protector.
- Relocate your phone to a higher location. The phone might have better reception in a high area.
- If the other phones in your home are having the same problem, contact your telephone service provider (charges may apply).

I experience poor sound quality when using the speakerphone.

• For increased sound quality while using the speakerphone, place the handset on a flat surface with the dial pad facing up.

I hear other calls while using my phone.

• Disconnect the telephone base from the telephone jack, and plug in a different telephone. If you still hear other calls, call your telephone service provider.

The telephone does not ring when there is an incoming call.

- Make sure that the ringer is not off. Refer to **Ringer volume** on page 24 in this user's manual.
- Make sure you plug in the telephone line cord securely into the telephone base and the telephone jack. Make sure you plug in the power cord securely.
- The cordless handset may be too far from the telephone base.

- Charge the battery in the cordless handset for at least 16 hours. For optimum daily performance, return the cordless handset to the handset charger when not in use.
- You may have too many extension phones on your telephone line to allow all of them to ring simultaneously. Try unplugging some of the other phones.
- The layout of your home or office might be limiting the operating range.
 Try moving the telephone base to another location, preferably to a higher location.
- If the other phones in your home are having the same problem, contact your telephone service provider (charges may apply).
- Test a working phone at the phone jack. If another phone has the same problem, contact your telephone service provider (charges may apply).
- Other electronic products such as HAM Radios and other DECT phones can cause interference with your cordless phone. Try installing your phone as far away as possible from these types of electronic devices.
- Remove and install the battery again. Place the cordless handset in the telephone base. Wait for the cordless handset to reestablish its connection with the telephone base. Allow up to one minute for this to take place.
- Your line cord might be malfunctioning. Try installing a new line cord.

My calls cut in and out while I'm using my cordless handset.

- Other electronic products such as HAM Radios and other DECT phones can cause interference with your cordless phone. Try installing your phone as far away as possible from these types of electronic devices.
- Do not install this phone near a microwave oven or on the same electrical outlet. You might experience decreased performance while the microwave oven is operating.
- If you plug your phone in with a modem or surge protector, plug the phone (or modem/surge protector) into a different location. If this does not solve the problem, relocate your phone or modem farther apart from one another, or use a different surge protector.
- Relocate your telephone base to a higher location. The phone might have better reception when installed in a high area.
- If the other phones in your home are having the same problem, contact your telephone service provider (charges may apply).

The charge light is off or blinking.

- · Make sure you plug the power and line cords in correctly and securely.
- Unplug the electrical power. Wait for 15 seconds, then plug it back in. Allow up
 to one minute for the cordless handset and telephone base to reset.

- Clean the cordless handset and telephone base charging contacts each month with a pencil eraser or cloth.
- A blinking CHARGE light is an indication that the battery is not connected to the handset or missing completely. Ensure that the battery is installed properly.

My caller ID isn't working.

- Caller ID is a subscription service. You must subscribe to this service from your telephone service provider for this feature to work on your phone.
- The caller must be calling from an area that supports caller ID.
- Both your and your caller's telephone service providers must use caller ID compatible equipment.
- If you subscribe to high-speed Internet service (DSL digital subscriber line) through your telephone line, you must install a DSL filter between the telephone line cord and the telephone wall jack (page 5). The filter prevents noise and caller ID problems resulting from DSL interference. Please contact your DSL service provider for more information about DSL filters.

System does not receive caller ID when on a call.

 Make sure you subscribe to caller ID with call waiting features from your telephone service provider. Caller ID feature works only if both you and the caller are in areas offering caller ID service, and if both telephone service providers use compatible equipment.

Incomplete messages.

- If a caller leaves a very long message, part of it may be lost when the system disconnects the call after four minutes.
- If the caller pauses for longer than seven seconds, the system stops recording and disconnects the call.
- If the system's memory becomes full during a message, the system stops recording and disconnects the call.
- If the caller's voice is very soft, the system may stop recording and disconnect the call.

Difficulty hearing messages.

- Press ▲/VOLUME to increase the telephone base speaker volume.
- Press ADIR/VOLUME+ on a cordless handset to adjust the message playback volume.

System does not answer after the correct number of rings.

- Make sure that the answering system is on. **ANS ON** should show on the handset and **O/ANSWER ON** light on the telephone base should be on.
- If toll saver is activated, the number of rings changes to two when you have new messages stored (page 21).
- If the memory is full or the system is off, the system will answer after 10 rings.
- In some cases, the answering system is affected by the ringing system used by your telephone service provider.
- If you subscribe to voicemail service, change the number of rings so that
 your answering system answers before your voicemail answers (page 59). To
 determine how many rings activate your voicemail, contact your telephone
 service provider.
- If there is a fax machine connected to the same telephone line, try
 disconnecting the fax machine. If that solves the problem, consult
 your fax machine documentation for information on compatibility with
 answering systems.

System does not respond to remote commands.

- Make sure to enter your remote access code correctly (page 22).
- Make sure you are calling from a touch-tone phone. When you dial a number, you should hear tones. If you hear clicks, the phone is not a touch-tone telephone and cannot activate the answering system.
- The answering system may not detect the remote access code while your announcement is playing. Try waiting until the announcement is over before entering the code.
- There may be interference on the phone line you are using. Press dial pad keys firmly.

System does not record messages.

- Make sure the answering system is on. ANS ON should show on the handset and **७/ANSWER ON** light on the telephone base should be on.
- Make sure the memory of the answering system is not full.
- If you subscribe to voicemail service, change the number of rings so that
 your answering system answers before your voicemail answers (page 59). To
 determine how many rings activate your voicemail, contact your telephone
 service provider.
- If there is a fax machine connected to the same telephone line, try
 disconnecting the fax machine. If that solves the problem, consult
 your fax machine documentation for information on compatibility with
 answering systems.

System announces "Time and day not set."

You need to reset the system clock (page 15).

Outgoing announcement is not clear.

- When you record your announcement, make sure you speak in a normal tone of voice, about nine inches from the handset.
- Make sure there is no background noise (TV, music, etc.) while recording.

New voicemail and show on the handset display and I don't know why.

I cannot retrieve voicemail messages.

 Your telephone has both a built-in answering system and voicemail indication. They are independent features and each alerts you to new messages differently (page 59). If you subscribe to voicemail service from your telephone service provider, contact your telephone service provider for more information on how to access your voicemail.

I subscribe to a nontraditional telephone service that uses my computer to establish connections, and my telephone doesn't work.

- Make sure your computer is powered on.
- Make sure your Internet connection is working properly.
- Make sure that the software is installed and running for your nontraditional telephone service.
- Make sure to plug your USB telephone adapter into a dedicated USB port on your computer. Do not plug into a multiple port USB hub (USB splitter) that is not powered.
- In a few rare instances, the USB port on your computer may not have enough power. In these instances, try using a USB hub with its own external power supply.
- If you are using a firewall, it may prevent access to your nontraditional telephone service provider. Contact your service provider for more information.

Common cure for electronic equipment.

If the telephone does not seem to be responding normally, try putting the cordless handset in the handset charger. If it does not seem to respond, do the following (in the order listed):

- Disconnect the power to the telephone base.
- · Disconnect the cordless handset battery.
- · Wait a few minutes.
- · Connect power to the telephone base.
- Install the battery again, and place the cordless handset into the handset charger.
- Wait for the cordless handset to reestablish its connection with the telephone base. Allow up to one minute for this to take place.

Maintenance

Taking care of your telephone

- Your cordless telephone contains sophisticated electronic parts, so you
 must treat it with care.
- · Avoid rough treatment.
- Place the handset down gently.
- Save the original packing materials to protect your telephone if you ever need to ship it.

Avoid water

 You can damage your telephone if it gets wet. Do not use the handset in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower.

Electrical storms

 Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, take caution when using electric appliances during storms.

Cleaning your telephone

- Your telephone has a durable plastic casing that should retain its luster for many years. Clean it only with a soft cloth slightly dampened with water or a mild soap.
- Do not use excess water or cleaning solvents of any kind.

Remember that electrical appliances can cause serious injury if used when you are wet or standing in water. If the telephone base should fall into water, DO NOT RETRIEVE IT UNTIL YOU UNPLUG THE POWER CORD AND TELEPHONE LINE CORDS FROM THE WALL. Then pull the unit out by the unplugged cords.

Important safety information



This symbol is to alert you to important operating or servicing instructions that may appear in this user's manual. Always follow basic safety precautions when using this product to reduce the risk of injury, fire, or electric shock.

Safety information

- Read and understand all instructions in the user's manual. Observe all markings on the product.
- Avoid using a telephone during a thunderstorm. There may be a slight chance of electric shock from lightning.
- Do not use a telephone in the vicinity of a gas leak. Under certain circumstances, a spark may be created when the adapter is plugged into the power outlet, or when the handset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. The user should not plug the phone into a power outlet, and should not put a charged handset into the cradle, if the phone is located in an environment containing concentrations of flammable or flame-supporting gases, unless there is adequate ventilation. A spark in such an environment could create a fire or explosion. Such environments might include: medical use of oxygen without adequate ventilation; industrial gases (cleaning solvents; gasoline vapors; etc.); a leak of natural gas; etc.
- Do not use this product near water, or when you are wet. For example, do not use it in a
 wet basement or shower, or next to a swimming pool, bathtub, kitchen sink, or laundry tub.
 Do not use liquids or aerosol sprays for cleaning. If the product comes in contact with any
 liquid, unplug any line or power cord immediately. Do not plug the product back in until it
 has dried thoroughly.
- Install this product in a protected location where no one can trip over any line or power cords. Protect cords from damage or abrasion.
- If this product does not operate normally, see the Troubleshooting section on pages 76-83
 of this user's manual. If you cannot solve the problem, or if the product is damaged, refer to
 the Limited warranty section on pages 89-90. Do not open this product except as directed
 in your user's manual. Opening the product or reassembling it incorrectly may expose you to
 hazardous voltages or other risks.



Replace batteries only as described in your user's manual, see pages 7-8. Do not burn or puncture batteries — they contain caustic chemicals.

 Power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.

Caution: Use only the power adapter provided with this product. To obtain a replacement, visit our website at **www.telephones.att.com** or call

1 (800) 222-3111. In Canada, dial 1 (866) 288-4268.

Important safety information

Especially about cordless telephones

- Privacy: The same features that make a cordless telephone convenient create some limitations. Telephone calls are transmitted between the telephone base and the handset by radio waves, so there is a possibility that your cordless telephone conversations could be intercepted by radio receiving equipment within range of the cordless handset. For this reason, you should not think of cordless telephone conversations as being as private as those on corded telephones.
- Electrical power: The telephone base of this cordless telephone must be connected to a
 working electrical outlet which is not controlled by a wall switch. Calls cannot be made from
 the handset if the telephone base is unplugged, switched off or if the electrical power is
 interrupted.
- Potential TV interference: Some cordless telephones operate at frequencies that may cause interference to TVs and VCRs. To minimize or prevent such interference, do not place the telephone base of the cordless telephone near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.
- Rechargeable batteries: This product contains nickel-metal hydride rechargeable batteries.
 Exercise care in handling batteries in order not to create a short circuit with conductive material such as rings, bracelets, and keys. The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger.
- Nickel-metal hydride rechargeable batteries: Dispose of these batteries in a safe manner. Do
 not burn or puncture. Like other batteries of this type, if burned or punctured, they could
 release caustic material which could cause injury.



The RBRC™ Seal means that the manufacturer is voluntarily participating in an industry program to collect and recycle nickel-metal hydride rechargeable batteries when taken out of service within the United States. These batteries may be taken to a participating local retailer of replacement batteries or recycling center. Or you may call 1 (800) 8-BATTERY for locations accepting spent Ni-MH batteries.

Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital cordless telephones):

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless telephones and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

Pacemaker patients

Should keep wireless telephones at least six inches from the pacemaker.

Should NOT place wireless telephones directly over the pacemaker, such as in a breast pocket, when it is turned ON.

Should use the wireless telephone at the ear opposite the pacemaker.

WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless telephones.

Especially about telephone answering systems

Two-way recording: This unit does not sound warning beeps to inform the other party that the call is being recorded. To ensure that you are in compliance with any federal or state regulations regarding recording a telephone call, you should start the recording process and then inform the other party that you are recording the conversation.

FCC Part 68 and ACTA

This equipment complies with Part 68 of the FCC rules and with technical requirements adopted by the Administrative Council for Terminal Attachments (ACTA). The label on the back or bottom of this equipment contains, among other things, a product identifier in the format US:AAAEQ##TXXXX. This identifier must be provided to your telephone service provider upon request.

The plug and jack used to connect this equipment to premises wiring and the telephone network must comply with the applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines. See Installation Instructions in the user's manual.

The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following the US: in the product identifier (e.g., if ## is 03, the REN is 0.3). In most, but not all areas, the sum of all RENs should be five (5.0) or less. For more information, please contact your telephone service provider.

This equipment may not be used with Party Lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable the alarm equipment, consult your telephone service provider or a qualified installer.

If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or its authorized agents. For repair procedures, follow the instructions outlined under the Limited Warranty.

If this equipment is causing harm to the telephone network, the telephone service provider may temporarily discontinue your telephone service. The telephone service provider is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem and the telephone service provider is required to inform you of your right to file a complaint with the FCC. Your telephone service provider may make changes in its facilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephone service provider is required to notify you if such changes are planned.

If this product is equipped with a corded or cordless handset, it is hearing aid compatible.

If this product has memory dialing locations, you may choose to store emergency telephone numbers (e.g., police, fire, medical) in these locations. If you do store or test emergency numbers, please:

Remain on the line and briefly explain the reason for the call before hanging up. Perform such activities in off-peak hours, such as early morning or late evening.

Industry Canada

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation.

The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met.

The Ringer Equivalence Number (REN) for this terminal equipment is 0.1. The REN is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices does not exceed five.

This product meets the applicable Industry Canada technical specifications.

FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this telephone.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The handset may be safely held against the ear of the user. The telephone base shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of approximately 20 cm (8 inches) or more.

This Class B digital apparatus complies with Canadian ICES-003.

Limited warranty

The AT&T brand is used under license - any repair, replacement or warranty service, and all questions about this product should be directed to our website at **www.telephones.att.com** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.

1. What does this limited warranty cover?

The manufacturer of this AT&T-branded product warrants to the holder of a valid proof of purchase ("CONSUMER" or "you") that the product and all accessories provided in the sales package ("PRODUCT") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the PRODUCT operating instructions. This limited warranty extends only to the CONSUMER for products purchased and used in the United States of America and Canada.

2. What will be done if the PRODUCT is not free from defects in materials and workmanship during the limited warranty period ("materially defective PRODUCT")?

During the limited warranty period, the manufacturer's authorized service representative will repair or replace at the manufacturer's option, without charge, a materially defective PRODUCT. If the manufacturer repairs the PRODUCT, they may use new or refurbished replacement parts. If the manufacturer chooses to replace the PRODUCT, they may replace it with a new or refurbished PRODUCT of the same or similar design. The manufacturer will retain defective parts, modules, or equipment. Repair or replacement of the PRODUCT, at the manufacturer's option, is your exclusive remedy. The manufacturer will return repaired or replacement products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

3. How long is the limited warranty period?

The limited warranty period for the PRODUCT extends for ONE (1) YEAR from the date of purchase. If the manufacturer repairs or replaces a materially defective PRODUCT under the terms of this limited warranty, this limited warranty also applies to repaired or replacement PRODUCT for a period of either (a) 90 days from the date the repaired or replacement PRODUCT is shipped to you or (b) the time remaining on the original one-year limited warranty; whichever is longer.

4. What is not covered by this limited warranty?

This limited warranty does not cover:

- PRODUCT that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water, or other liquid intrusion; or
- PRODUCT that has been damaged due to repair, alteration, or modification by anyone other than an authorized service representative of the manufacturer; or
- PRODUCT to the extent that the problem experienced is caused by signal conditions, network reliability or cable or antenna systems; or
- PRODUCT to the extent that the problem is caused by use with non-AT&T accessories; or
- PRODUCT whose warranty/quality stickers, PRODUCT serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or
- PRODUCT purchased, used, serviced, or shipped for repair from outside the United States
 of America or Canada, or used for commercial or institutional purposes (including but not
 limited to products used for rental purposes); or
- PRODUCT returned without valid proof of purchase (see item 6 below); or
- Charges for installation or setup, adjustment of customer controls, and installation or repair
 of systems outside the unit.

5. How do you get warranty service?

To obtain warranty service, visit www.telephones.att.com or call 1 (800) 222-3111. In Canada, dial 1 (866) 288-4268.

NOTE: Before calling for service, please review the user's manual; a check of the PRODUCT's controls and features may save you a service call.

Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the PRODUCT(s) to the service location. The manufacturer will return repaired or replaced PRODUCT under this limited warranty to you. Transportation, delivery or handling charges are prepaid. The manufacturer assumes no risk for damage or loss of the PRODUCT in transit. If the PRODUCT failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, the manufacturer will notify you and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of products that are not covered by this limited warranty.

6. What must you return with the PRODUCT to get warranty service?

You must:

- Return the entire original package and contents including the PRODUCT to the service location along with a description of the malfunction or difficulty; and
- Include a "valid proof of purchase" (sales receipt) identifying the PRODUCT purchased (PRODUCT model) and the date of purchase or receipt; and
- Provide your name, complete and correct mailing address, and telephone number.

7. Other limitations

This warranty is the complete and exclusive agreement between you and the manufacturer of this AT&T branded PRODUCT. It supersedes all other written or oral communications related to this PRODUCT. The manufacturer provides no other warranties for this PRODUCT. The warranty exclusively describes all of the manufacturer's responsibilities regarding the PRODUCT. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification.

State/Provincial Law rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the PRODUCT is fit for ordinary use) are limited to one year from date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event shall the manufacturer be liable for any indirect, special, incidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the PRODUCT or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this PRODUCT. Some states/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Please retain your original sales receipt as proof of purchase.

Technical specifications

RF frequency band	1921.536MHz — 1928.448MHz
Channels	5
Operating temperature	32°F — 122°F 0°C — 50°C
Telephone base voltage (AC voltage, 60Hz)	96Vrms - 130Vrms
Telephone base voltage (AC adapter output)	6VDC @ 400mA
Handset voltage	2.4VDC - 3.2VDC
Charger voltage (AC adapter output)	6VAC @ 300mA

Operation	Operating time*
Talk time (cordless handset)	Up to seven hours
Talk time (cordless handset speakerphone)	Up to five hours
Standby	Up to seven days

^{*} Operating times vary depending on your actual use and the age of the battery.

DECT 6.0 digital technology

The AT&T DECT 6.0 products offer unsurpassed range performance and sound clarity. This is achieved through a unique antenna design and advances in noise filtering technology. An independent laboratory has confirmed that AT&T DECT 6.0 products perform up to 45% better in range competitions. Now calls can be taken in the basement, backyard and garage with exceptional sound quality.

Telephone operating range

This cordless telephone operates within the maximum power allowed by the Federal Communications Commission (FCC). Even so, this handset and telephone base can communicate over only a certain distance — which can vary with the locations of the telephone base and handset, the weather, and the construction of your home or office.

Redefining long range coverage and clarity

This telephone base comes with an antenna which gives much better clarity and covers a longer range than before.

illuex		
A	Dial mode,	
Alert tones, base, 72 handset, 71 message alert tone, 23 Announcement, 19-20 Answering calls, 30 Answering system, 59-67 Auto off, 31 B Battery charging, 7-8	 base, 29 handset, 17 Dialing directory dialing, 50 from a record in the caller ID history, 56 options, 55 Directory dial number, 50 edit entries, 50 name search, 49 new entries, 44-47 Display dial, 50 	
Battery installation, 7-8	DSL, 4, 5	
C	<u> </u>	
Call intercept, 61 Call screening, 21, 61 Call transfer using intercom, 41 Call waiting, 35 Caller ID (CID), 52-58 add entries to phone directory, 56	Elapsed time, 30-31 Ending calls, 31 Equalizer, 34, 62 Expansion handset, 68	
delete entries, 56 dial entries, 56 review entries, 54	Flash (switch hook flash), 35	
set date and time, 16, 28 Chain dialing, 36 Charger installation, 6 Clear voicemail indication, base, 26 handset, 14 Clock, base, 27 handset, 15-16 D Day and time, base, 27	H Handset key tone, 15 LCD language, 14 locator, 38 quick reference guide, 1-2 ringer tone, 13 ringer volume, 13 screen display message, 73-75 settings, 13-18 speakerphone, 31 temporary ringer silencing, 31 voicemail indicator, 14	
handset, 15-16	1	
Delete redial entries, base, 33 handset, 32 Deregistration, 70	Important safety information, 85–86 Incoming caller ID history, 53 Incoming calls, 30 Installation, 4 Intercom, 39-40	

Κ

Key tone, 15, 26

L

Last number redial, 32-33 LCD language, 14, 25 Lights, 72 Limited warranty, 89–90

M

Maintenance, 84
Making a call, 30
Memory match, 54
Memo,
playback, 64
record, 64
Message
alert tone, 23
counter display, 65
playback, 62-63
Missed calls indicator, 53
Mute. 35

Ν

Names enter into directory, 44, 46 search for, 49 Number of rings, 21

0

On hook dialing, 30 Outgoing announcement, 19-20

Ρ

Paging tone, 38 Phonebook, see directory, 43-51 Power adapter, 5 Predialing, 30

Q

Quick reference guide, 1-3

R

Redial, 32 Registration, 69 Remote access, 66-67 Ringer silencing, 31 Ringer volume base, 24 handset, 13

S

Safety information, 85–86 Search by name, 48 Share call, 42 Speakerphone, base, 31 handset, 31

Т

Technical specifications, 91
Telephone operating range, 91
Temporary ringer silencing, 31
Temporary tone dialing, 37
Time,
base, 27
handset, 15-16
Troubleshooting, 76-83

V

Visual message waiting indicator, base, 25 handset, 14 Voicemail, 59 Voice prompts, 60 Volume control, 35

W

Wall mount installation, 9 Warranty, 89–90 Website, 18, 29

Remote access wallet card

Use the wallet card below to help you remember commands to control your answering system from any touch-tone telephone.

Cut along dotted line.



at&t Call your phone number, then enter your two-digit access code (preset to 19).

Action	Remote command
Play all messages	
Play new messages	.2
Delete the message	.3
Delete all old messages	.33
Repeat or go back	.4
Stop	.5
Help menu	

Fold here.

Skip the message.....6 Record announcementTONE ¥ 7 End remote access call 8 (or hang up) Turn system off or on.......

Model name: CL84100/CL84200/CL84250/CL84300/CL84350 Type: DECT 6.0 corded/cordless telephone/answering system with caller ID/call waiting

© 2010 Advanced American Telephones. All Rights Reserved. AT&T and the AT&T logo are trademarks of AT&T Intellectual Property licensed to Advanced American Telephones, San Antonio, TX 78219. Printed in China.



www.telephones.att.com

Clearspeak™ is a trademark of Advanced American Telephones.

© 2010 Advanced American Telephones. All Rights Reserved.

AT&T and the AT&T logo are trademarks of AT&T Intellectual Property licensed to

Advanced American Telephones, San Antonio, TX 78219.

Printed in China. Issue 5 AT&T 12/10.